


# Instructions

## Cube Size Thermostat


1. Disconnect unit from electrical power.

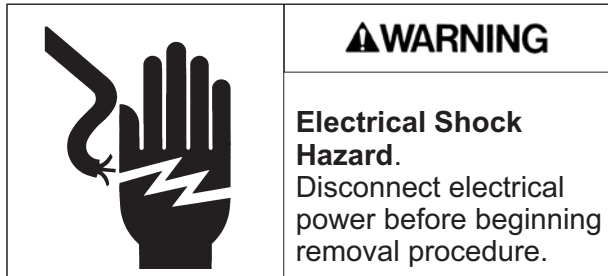

2. Remove door.
3. Remove top panel.
4. Remove service panel.
5. Remove back panel.
6. Cut cable tie holding cube size bulb in evaporator well. Pull bulb out of well.
7. Pull cube size cap tube and bulb from evaporator area and allow to hang freely behind machine.



8. Remove two screws holding thermostat bracket to cabinet. Drop bracket down and pull forward to get access to wires and screws.

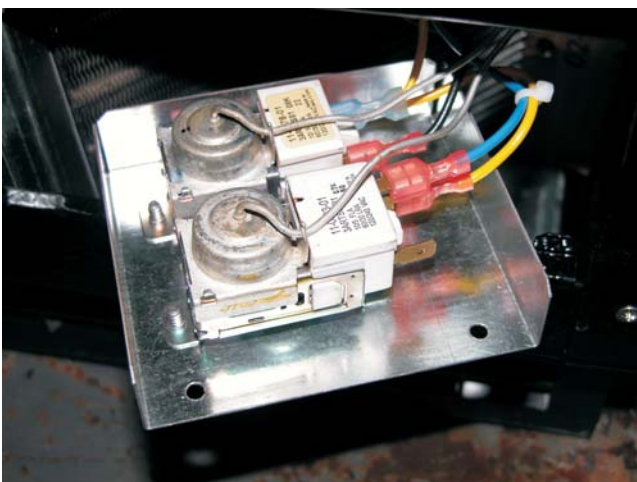

9. Disconnect wires from cube size thermostat.
10. Remove two screws holding cube size thermostat to bracket. Pull cube size thermostat from the machine.
11. Route new cube size thermostat bulb and cap tube from the front, through the hole in the air baffle and into the back of the unit.
12. Attach cube size thermostat to thermostat bracket, attach wires.
13. Attach bracket to cabinet.
14. Route cube size cap tube and bulb up the back of the machine and into the evaporator area.
15. Insert bulb into evaporator well. Secure with tie wrap.
16. Return all panels to their normal positions and secure with the original screws.
17. Reconnect power. Test machine, adjust cube size as needed.

