

Instructions

Service Controller Replacement

1. Disconnect Electrical Power
2. Remove front panel.
3. Open control box door.
4. Remove screws holding controller to door.
5. Disconnect all cables and wires.
6. Pull controller out of snaps holding it to door.
7. Touch the metal chassis of the unit to discharge any static electricity.
8. Install the new controller onto the door. Be SURE that all the snaps are holding the control board properly.
9. Secure controller using the original screws.
10. Reconnect all cables and wires to new controller.

Note: Units with a Lower Light and Switch Panel (D series and up): Connect panel cable to J3 Membrane. All others leave J3 Membrane open.

11. Close control box door.
12. Return front panel to unit.
13. Reconnect electrical power.
14. Push On button to restart, observe operation.