


SCR33
User's Manual
Service Parts

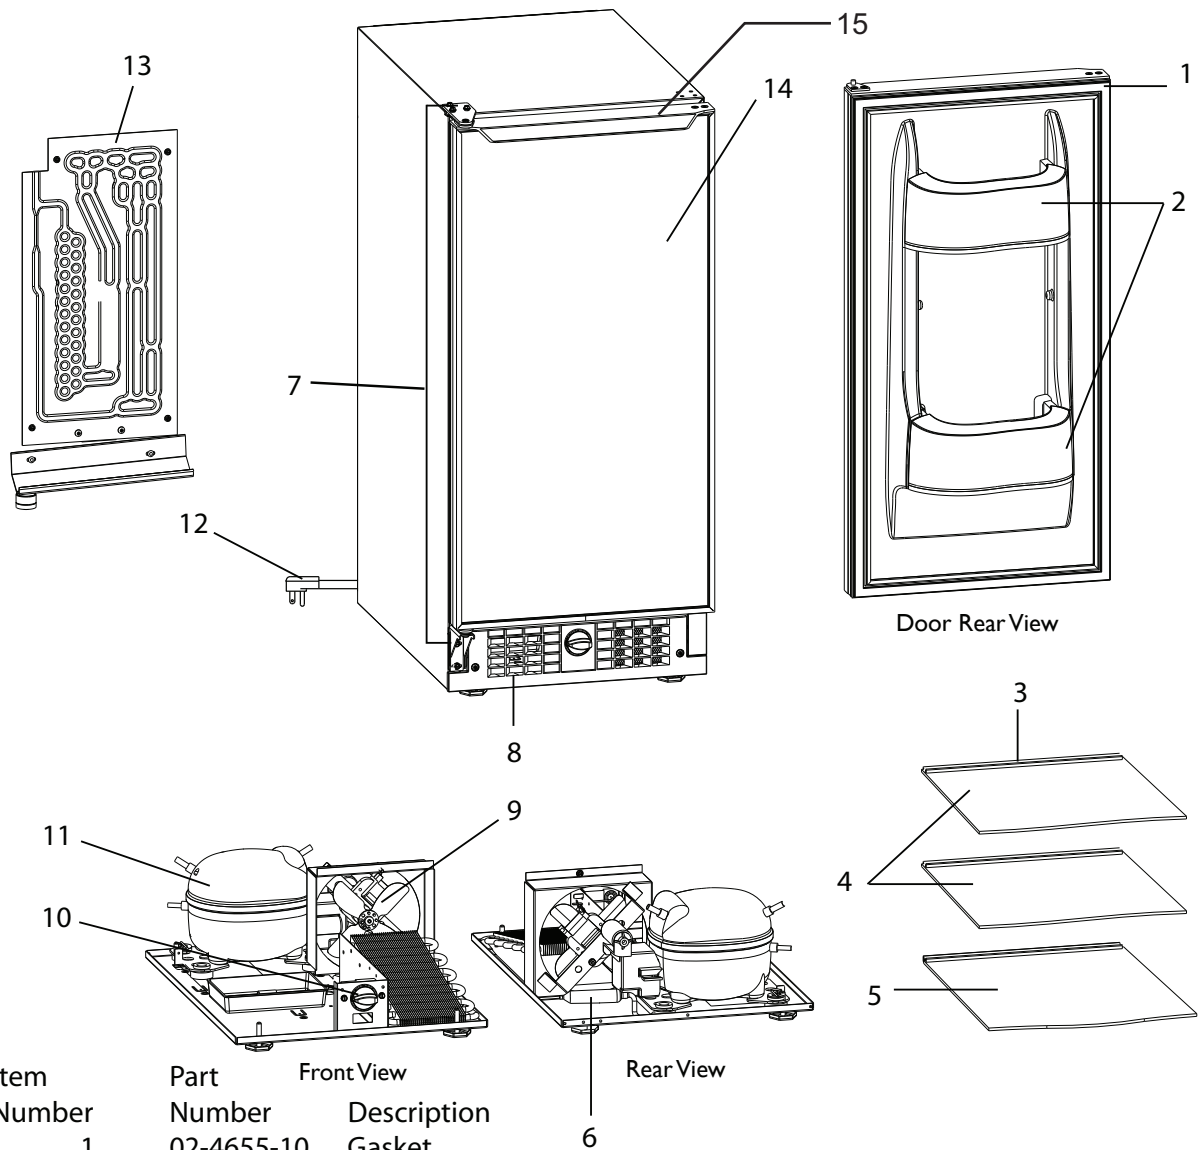

Item Number	Part Number	Front View Description	Rear View
1	02-4655-10	Gasket	
2	02-4655-04	Door shelf	
3	02-4655-08	Edge trim	
4	02-4655-05	Shelf	
5	02-4655-11	Crisper	
6	02-4655-02	Dryer	
7	02-4655-12	Hinge assembly	
8	02-4655-14	Grill	
9	02-4655-16	Fan motor and blade	
	02-4655-03	Fan blade	
10	02-4655-07	Control, includes knob. Knob part number is 02-4655-22	
11	02-4655-06	Compressor	
12	02-4655-01	Power cord	
13	02-4655-09	Evaporator	
14	02-4655-13	Door	
15	15-0731-03	Label, door handle	