

Instructions

Door Replacement Instructions



Push one hinge pin in to release the door.

Pull door out and slide off other pin.



Slide door onto one hinge pin.

Hold other hinge pin in with flat blade screwdriver.

Position the door for installation, then release. Move door slightly to engage pin into slot in door