

## WATER PLATE SPRING REPLACEMENT INSTRUCTIONS

### **Caution! Risk of Personal Injury, Property Damage or Equipment Failure**

Refer All Maintenance to Qualified Personnel

Disconnect Power Before Servicing Equipment

Read and Understand All Instructions Before Proceeding

1- Place the ice machine in the wash/clean mode. Open the water plate by pulling down on the right side and holding it until the plate continues to open on its own. When the plate is fully open, switch the unit off.

**Caution: Disconnect power to the unit before continuing with this procedure.**

2- Separate the springs from the cam arms by removing the screws at the spring ends of the arms. This will release the spring retainers and springs.

3- Separate the springs from the water plate spring bosses by twisting them off.

4- Reinstall the springs by first attaching them to the spring bosses. This is done by hooking the spring loop onto the groove in each spring boss and twisting the spring until it snaps in place fully in the groove. See the illustration for the proper orientation of the spring loop relative to the spring boss.

5- position the spring loops on the cam arm ends. Reinstall the spring retainers and tighten screws.

