

# KOLD-DRAFT

DOCUMENT #307106801

## CRUSHER CUTTER WHEEL & SHAFT REMOVAL

### PART # 102126101

- LOOSEN SET SCREW ON FRONT PULLEY AND REMOVE BELT
- LOOSEN SET SCREW ON EACH END OF THE DRUM
- PUSH SHAFT TOWARDS THE FRONT OF THE UNIT UNTIL SHAFT IS EVEN WITH THE DRUM
- WHEN EVEN LIFT CUTTER WHEEL (LIFT END FURTHEST FROM YOU FIRST) UP AND OUT OF HOPPER. (NOTE: FRONT BEARING WILL TILT A LITTLE BIT TO ALLOW BACK OF ASSEMBLY TO RAISE UP TO ACHIEVE PROPER ANGLE TO REMOVE).
- REVERSE TO REASSEMBLE (MAKE SURE SET SCREWS ARE ON THE FLAT OF THE SHAFT WHEN SECURING).

AT NO TIME DO YOU REMOVE THE SHAFT FROM THE DRUM, IF YOU REMOVE THE SHAFT ALL THE CUTTING TEETH WILL FALLOUT AND YOU WILL HAVE A BIGGER ISSUE.