

# FUSE HOLDER REPLACEMENT INSTRUCTIONS

## Caution! Risk of Personal Injury, Property Damage or Equipment Failure

Refer All Maintenance to Qualified Personnel

Disconnect Power Before Servicing Equipment

Read and Understand All Instructions Before Proceeding

1- Remove the old fuse holder and discard.

2- Install the new fuse holder. Note: Some applications require the use of two washers to install the fuse holder. These are provided in the kit. Place one on the outside and one on the inside of the control box wall.

3- To connect the wiring, attach the red wire from the front terminal of the fuse holder to the on/off switch and the black wire from the back terminal of the fuse holder to the control board input #3.

