



Water Level Sensor Cleaning




1. Remove Water Level Sensor

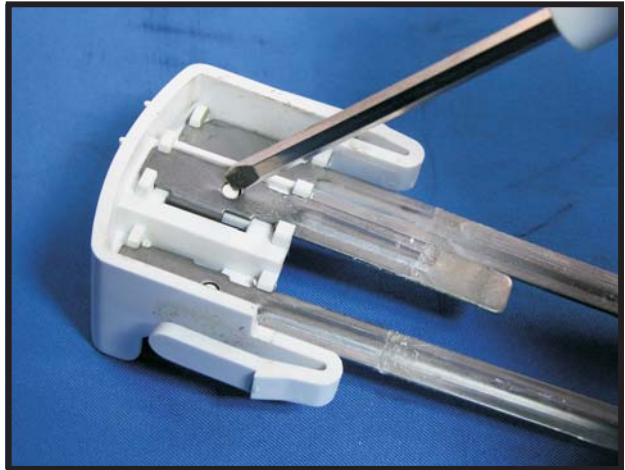


2. Release probes by pushing pins in.

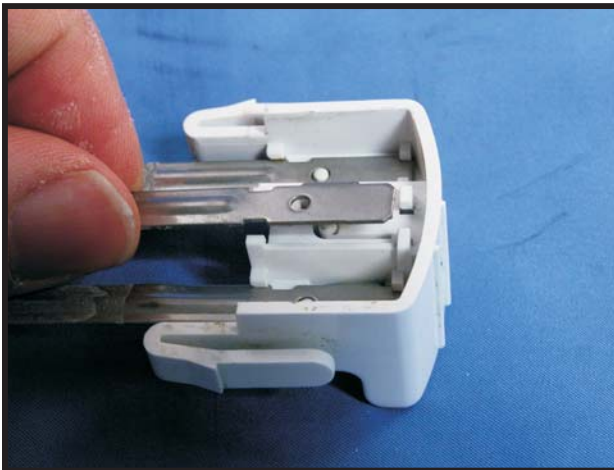

3. Pull down, then lift up to remove probe.

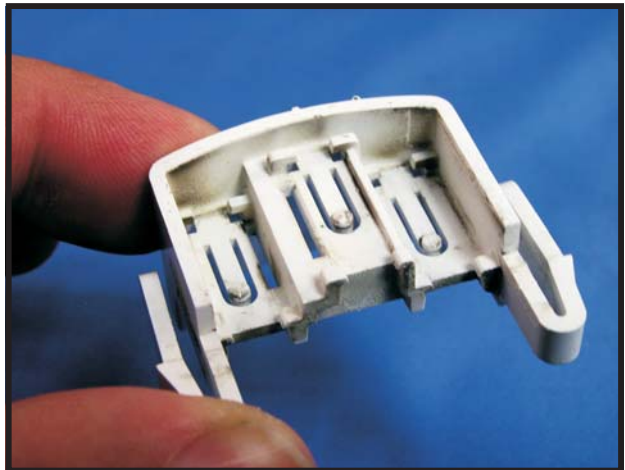

4. Clean all dirt and scale from the housing.

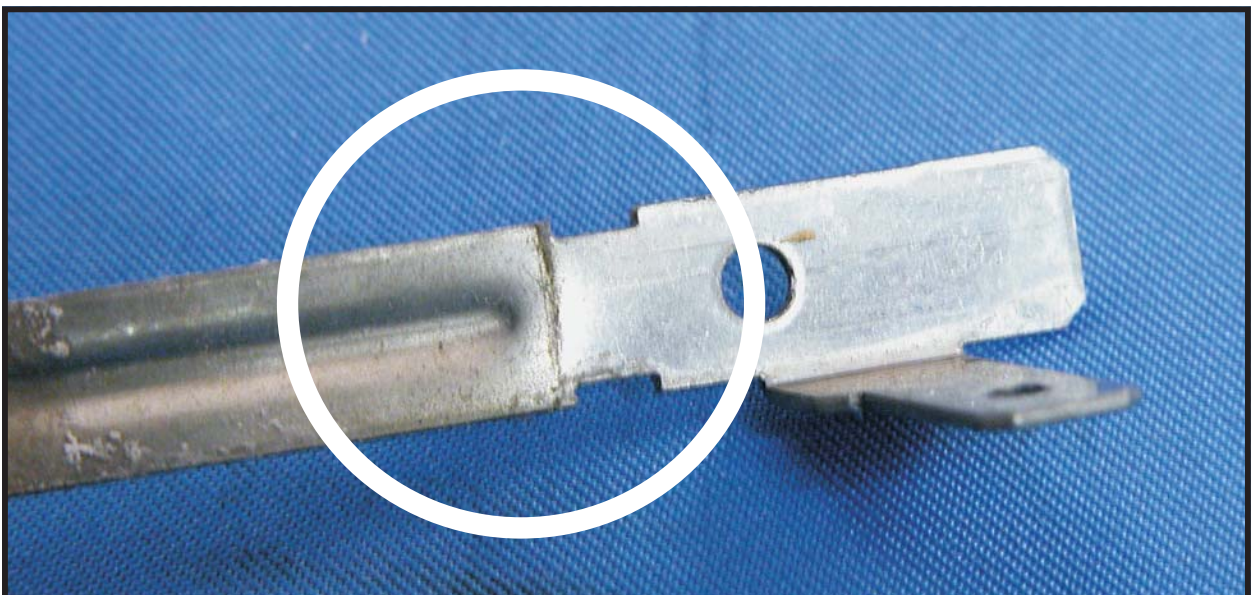

5. Clean entire probe, be sure circled area is clean.