

# Important Notice!

## EPR Setting

As shipped the EPR valve will maintain a low side pressure of 36 PSIG + or - 2 PSIG.

Machines will operate and make ice at that factory EPR setting. For optimum performance adjust the EPR to the settings in the chart below:

Ice Machine Model Number	When used with dedicated condensing unit	When used on rack
N0622L / F0822L	Full open	30 PSIG
N0922L / F1222L	Full open	30 PSIG
N1322L / F1522L	26 PSIG	26 PSIG

Superheat will be 12°F. + or - 2 degrees.

Note: EPR maintains evaporator pressure independent of lower suction pressure at condensing unit. Suction pressure adjustments by the EPR are limited by the suction pressure at the condensing unit.