RFE33 SERVICE PARTS

This is the parts list for the RFE33 Refrigerator.
It covers all models of the refrigerator, so be certain to check the model and serial number before ordering parts.

Table of Contents

Cabinet . . . . . page 2


Freezing compartment . . . . . page 3

Condensing unit . . . . . page 4

Wiring Diagrams . . . . . page 5

RFE33 SERVICE PARTS

Cabinet

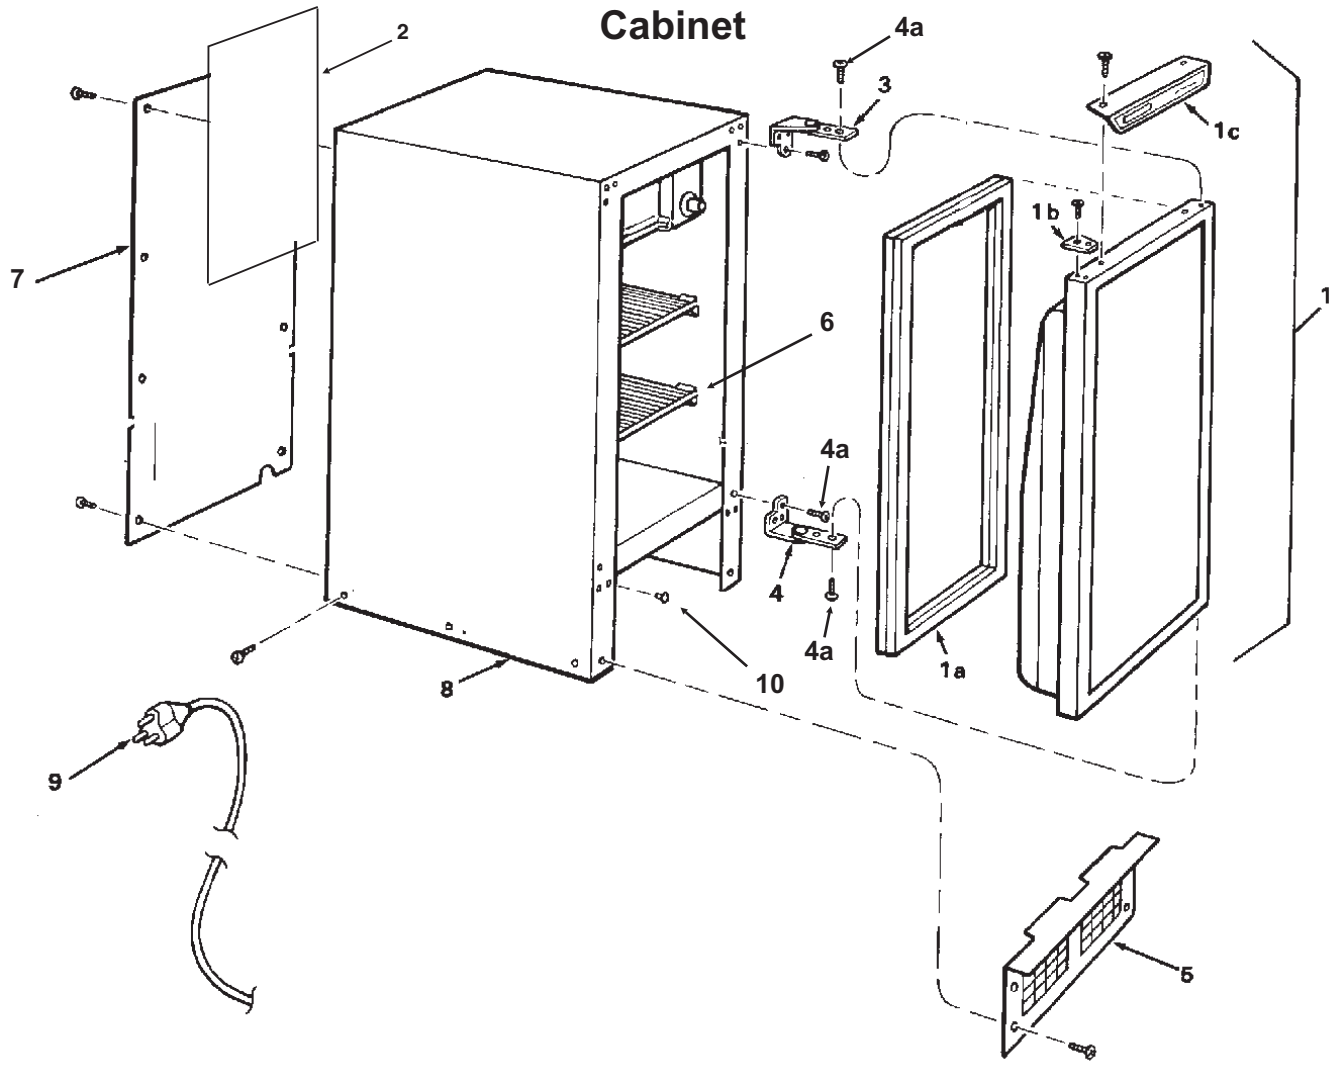


Item Number	Part Number	Description
1	A35364-008	Door with alum. trim (white panel)
	A35364-010	Door with black panel
1a	13-0825-01	Gasket, white
	13-0825-03	Gasket, grey
1b	15-0648-02	Left side filler plate
	15-0648-01	Right side filler plate (shipped w/product as spare)
	03-1418-24	Screw for alum door
	03-1418-40	Screw for brass door
1c	A29044-001	Handle, alum for white
	A29044-003	Handle for black
	03-1607-01	Screw for alum door
	15-0731-01	Emblem label (white)
	15-0731-02	Emblem label (black)
2	02-3256-01	Insulation & bag

Item Number	Part Number	Description
3	15-0799-01	Hinge
4	15-0799-02	Hinge
4a	03-1418-24	Screw for hinge
5	02-2243-02	Kickplate
6	02-2489-02	Shelf
7	A35546-001	Back panel (white)
	A35546-002	Back panel (black)
8	not available	Cabinet & liner
9	12-1638-17	Power cord
10	02-2481-01	Plug button (white)
	02-2481-02	Plug button (black)
11	02-3081-02	Door rod - top
12	02-3081-01	Door rod - bottom

RFE33 SERVICE PARTS


Freezing Compartment

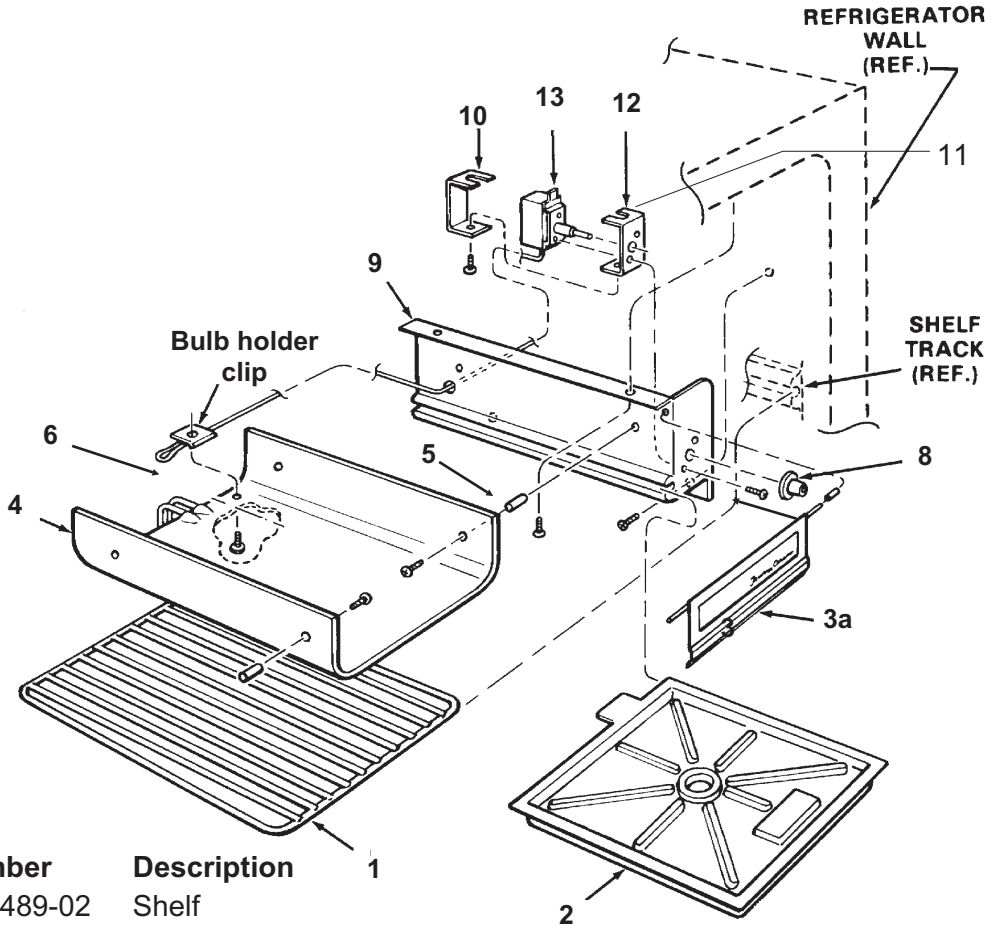

Item Number	Part Number	Description
1	02-2489-02	Shelf
2	02-2506-01	Drip pan
3	02-2507-01	Freezing compartment door
3a	02-2509-01	Bushing
4	A29423-001	Evaporator
5	02-2505-01	Spacer
6	03-3884-01	Nut, nylon
	03-3885-01	Washer, nylon
	03-1691-01	Screw, nylon
7	A35548-001	Suction line (not illustrated)
8	15-0657-01	Knob
8a	17-1432-01	Temp label
9	02-2823-01	Thermostat housing
	03-1611-01	Screw
10	A32074-001	Cover, goes with item 12
11	03-1404-33	Screw
12	A32073-001	Base, goes with item 10
13	11-0442-22	Thermostat
	12-1213-06	Bushing
	13-0557-00	Grommet

RFE33 SERVICE PARTS

Condensing Unit

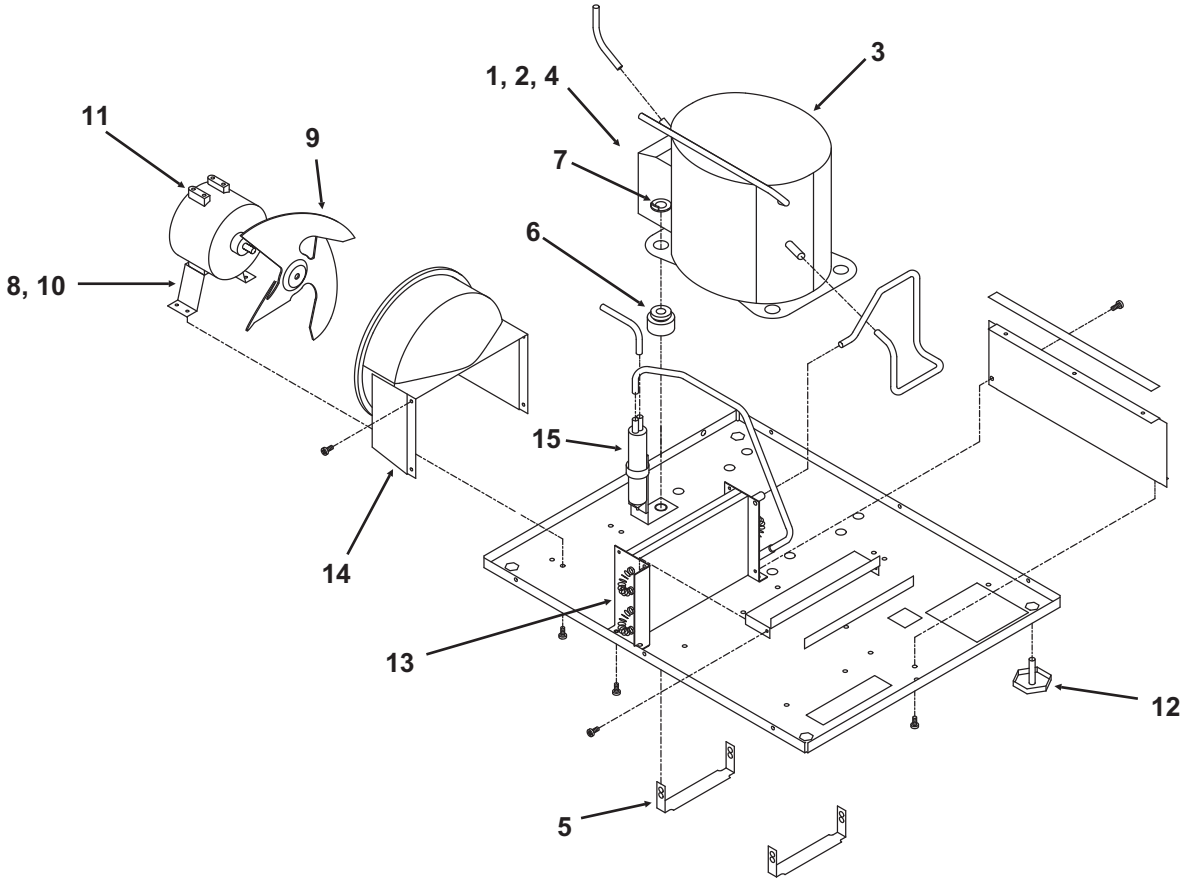

Item Number	Part Number		Description
	Embraco	Tecumseh - D series units	
1	18-8802-52	18-8947-41	Overload
2	18-8802-55*	18-8947-31	Relay
3	18-8802-21	18-8947-21	Compressor**
4	18-8802-53	18-8776-54	Terminal cover
	-	18-1902-66	Run capacitor

Note: Compressors are not interchangeable; an Embraco must be replaced with an Embraco and a Tecumseh with a Tecumseh. Very few units were made with Tecumseh compressors.

Item Number	Part Number	Description
5	A35632-001	Bracket, compressor mounting
6	18-8861-01	Grommet
7	03-3821-01	Pin (not shown)
	03-1407-08	Washer
8	03-1531-01	Screw
9	02-4197-01	Blade, fan
10	A28798-001	Bracket, mounting
11	12-2927-01	Fan motor
12	03-1608-01	Leveler, Leg
13	18-8712-01	Condenser
14	02-2871-01	Fan shroud
15	02-3490-01	Dryer

* Includes overload and terminal cover.

** Includes all starting components and a dryer.

RFE33 SERVICE PARTS

Wiring Diagram

