


Scotsman[®] CM³ photo-eye ice sensor removal for cleaning.

CME506 through CME806 shown, CME1056 similar. CME256 does not have cascading shield.



Remove Front Panel, Harvest any ice and shut machine off.

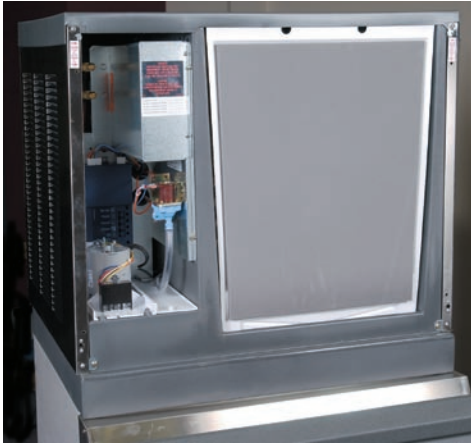


Remove Evaporator Cover



Pull Cube Deflector Out



Unbundle gray wires for more slack, so photo-eyes can be pulled out.

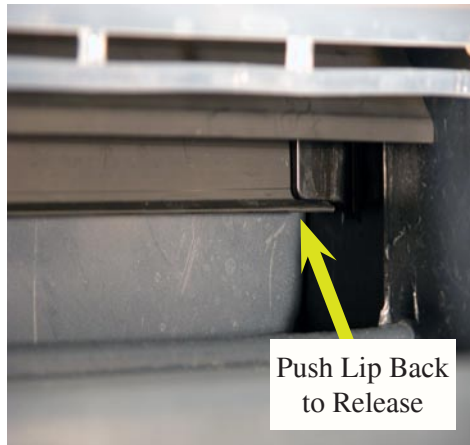


Push Lip Back to Release

Locate Cascading Shield, push bottom back on both left and right ends.



Lift cascading shield off photo-eyes, rotate forward and out of the machine.

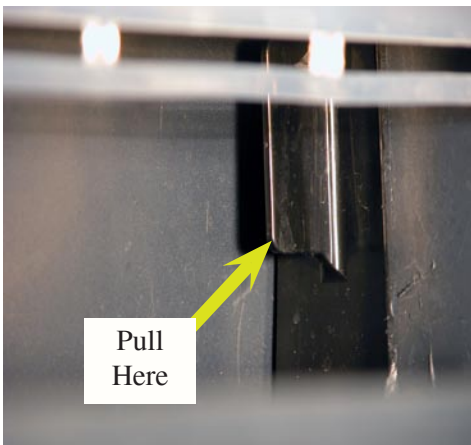

Pull Here

Reach in and pull photo-eye holder out of wall socket.



Photo eye holder out of machine. Clean photo eyes. Reverse steps to reassemble.



Note how cascading shield snaps onto photo-eye mounts.

Note: Clean photo eyes carefully, do not scratch material. See next page.

Ice Sensor - Service



Push in on alignment boss to release sensor mount.



Clean sensors with soft cloth or cotton swab dipped in diluted ice machine cleaner.



Route wire under clip and push sensor mount into place until alignment boss snaps into place.



Be sure wire is routed inside the back part of the sensor housing.