

# Instructions

## FOR INSTALLATION OF KTPS BAFFLE

The kit's baffle has holes on one edge to use as a template and inserts on the other to use for fastening.

1. Remove and discard plastic baffle.
2. Locate the edge of the baffle with the holes only.
3. Place that edge of the baffle onto the front of the canopy. Use the open holes in the baffle as a template to mark the drilling locations on the bin canopy. See figure 1.
4. Drill 3/8" holes in the canopy at the marked locations.

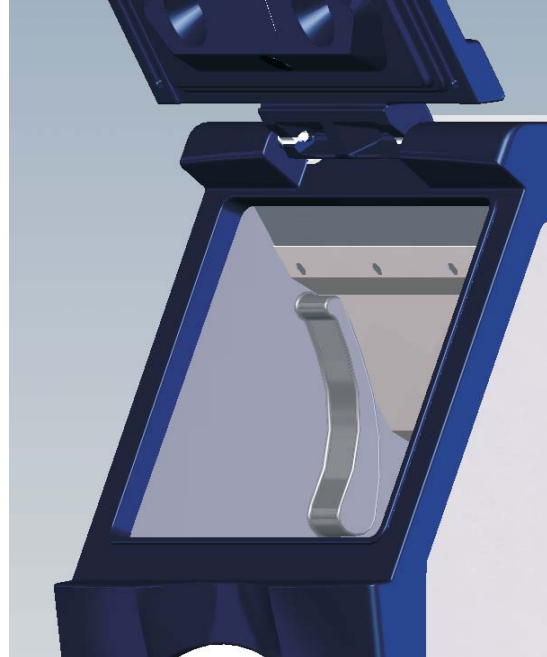


Figure 1

5. Reverse the baffle top-to-bottom and place it (see figure 2) so that the inserts in the baffle are behind the canopy.
6. Attach the baffle to the canopy using the 5/16 tamperproof screws provided.
7. Replace any exterior screws found with tamperproof screws from the kit. They will be behind and under the bin.

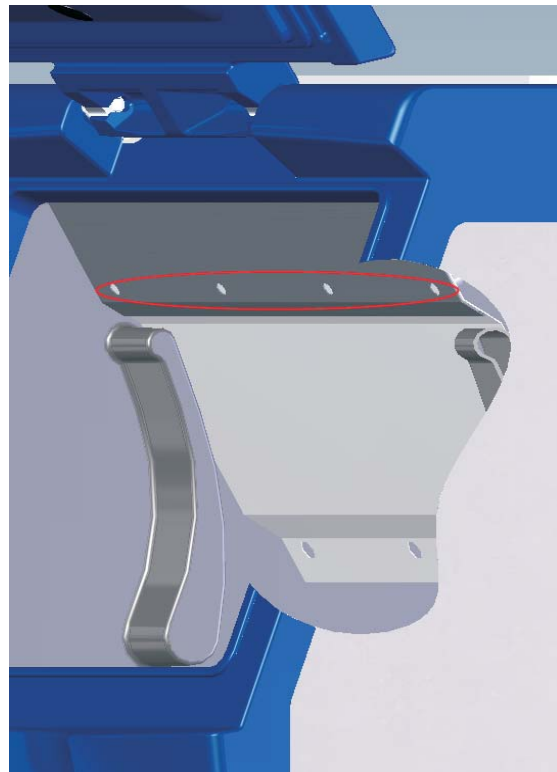


Figure 2