

INSTRUCTION SHEET

for Filler Trim Installation


This kit is designed to install a 15" wide ice maker in an 18" opening.

The filler is designed to be installed on the side of the cabinet.

Please follow steps below:

1. Clean cabinet surface. Make sure the surface is dry.
2. Peel paper off of tape and apply filler to side of cabinet as shown.

Make sure filler is flush with cabinet and even with top. See illustration.

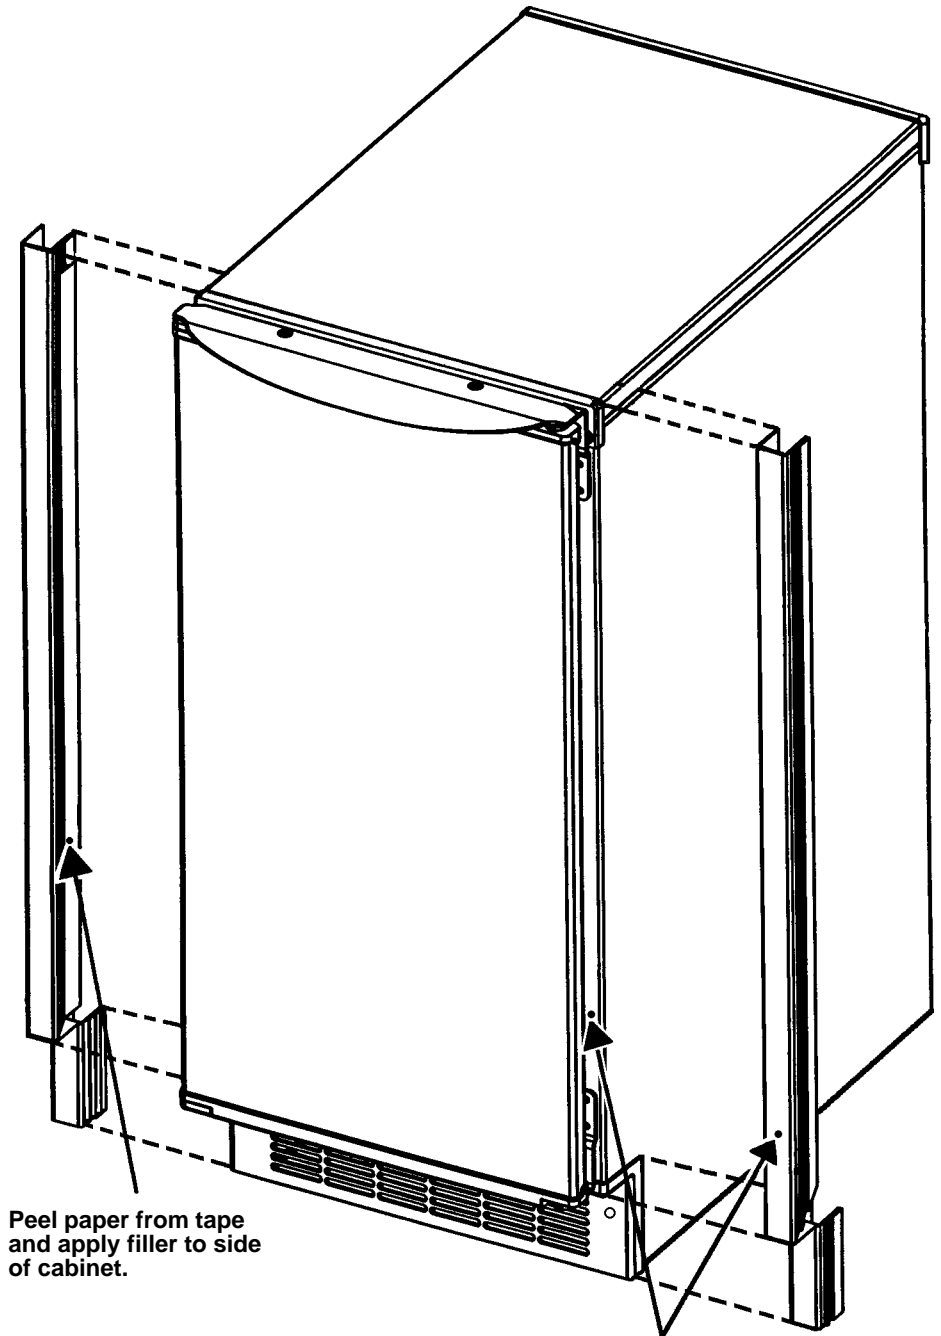

Peel paper from tape and apply filler to side of cabinet.

Filler must be flush with cabinet front and even with top of cabinet.