
Instructions

Installing the KDIL-STAT Kit

This Kit Includes:

- Bin Thermostat (11-0353-23)
- Ice Deflector (A40403-021)
- Bin Stat Bracket (A42030-001)
- Zip Ties [qty 3] (02-1798-01)
- Screws [qty 2] (03-1403-15)

Directions:

1. Before installing the bintop and ice machine, install the ice deflector on the dispenser. Make sure to install 4" from the left hand side, per **Figure A**.
2. Install the bintop and ice machine per the installation instructions furnished with the product.
3. Remove front panel.
4. Locate mounting hole. The hole is located in the base of the machine and has a gray foam plug in it.
5. Remove the foam plug.
6. Carefully uncoil the bin thermostat capillary tube.

**WARNING: Cap tube is fragile.
Handle with care. Avoid sharp bends.**

7. Mount the thermostat in the control box support using the pre-punched holes per **Figure B**.

Figure A


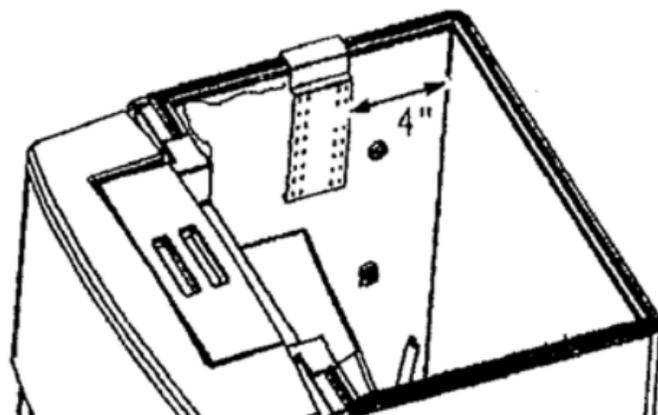


Figure B



Figure C

8. Open the control box door. Locate the blue wires connected together with an insulated double male quick connect. Disconnect the blue wires at the quick connect. See **Figure C**.

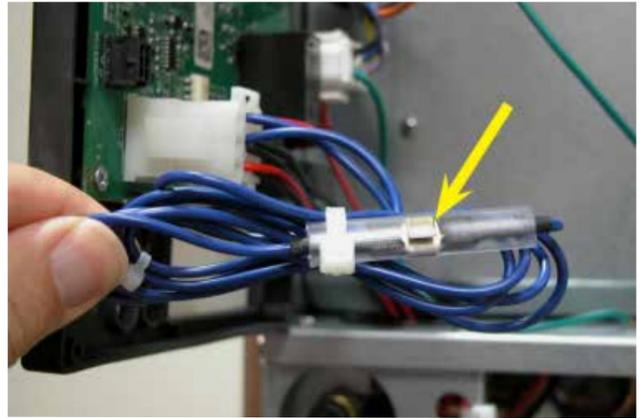


9. Route bin thermostat capillary tube through the hole in the base and reinstall the foam plug. Make sure when installing to loop the cap tube towards the top of the bracket, such that you can zip tie the tube near the upper most holes. See **Figure D**.

Note: Make sure to only pull enough capillary tube to complete this step. Leave any excess capillary tubing coiled in the cabinet.

10. Install the ice deflector per the instructions that come with the bracket.

Figure D

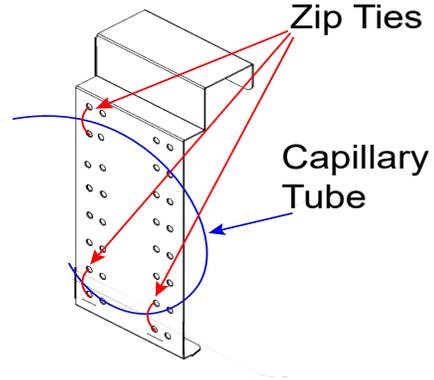

Adjustments: Check and/or Set Accordingly

□ Ice dispenser chute restrictor to its maximum opening. This should never be below 1 1/2" (see figure E).

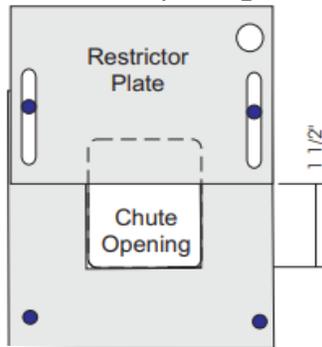


Figure E

□ Ice dispenser agitation setting should be set to .5 seconds. Set Motor Off time to 3 hours (see Figure F).

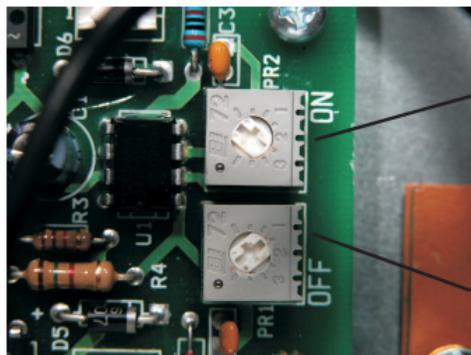


Figure F

Set full CCW*

Set full CW