MF900 Parts List

Table of Contents

\sim 1	• 4	ı
Cab	ınet	t

Air Cooled

Water Cooled

Compressor

Spout

Evaporator

Gear Motor

Control Box

Wiring Diagrams

GENERAL

This section contains the Parts Illustrations and the Parts List for each of the major assemblies in the Model MF900 Modular Flaker Icemaker.

A No Number designation, when used in the Part Number Column indicates the unit is not available from SCOTSMAN as an assembly. This designation is used only for the convenience and clarity of division in cataloging.

HOW TO ORDER PARTS OR ASSEMBLIES

When ordering parts or assemblies, to avoid costly delays and errors in shipment, give the part number, the complete description shown in the list, and the quantities of each part or assembly required. Also include the model name, the serial number of the icemaker for which the part is required and for parts which require color matching, the color of the cabinet.

All part numbers have TEN DIGITS (spaces), required for use in the Computer System. BE SURE to fill in ALL SPACES in the CATALOG NUMBER column, on the parts order form.

WIRING DIAGRAMS

This section is provided as an aid in understanding the electrical circuitry of the Model MF900 Modular Flaker Icemaker

When conducting a continuity check of the modular cuber:


- 1. Disconnect the main power source.
- DO NOT use an incandescent lamp or jumper wire, conduct all tests with a volt-ohm-meter.

The wiring diagrams in this Section are:

MF900AE-2A or MF900AE-7A 208 & 230/60/1 MF900WE-2A or MF900WE-7A 208 & 230/60/1 MF900A-3A 208-230/60/3 MF900W-3A 208-230/60/3

With contactor isolation relay

MF900AE-2A or MF900AE-7A 208 & 230/60/1 MF900WE-2A or MF900WE-7A 208 & 230/60/1 MF900A-3A 208-230/60/3 MF900W-3A 208-230/60/3

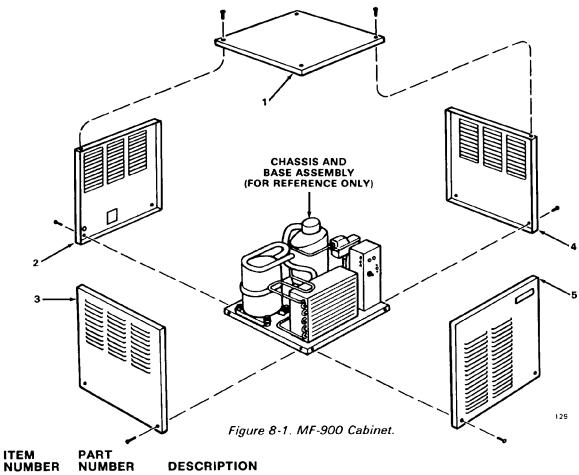

A IBER	PART NUMBER	DESCRIPTION
	No Number	MF-900 Cabinet
1	A26625-003	Panel, Top (C.R.S. Painted)
	A26625-002	Panel, Top (Stainless Steel)
		attaching parts, Index 1
	03-1417-15	Lockwasher, No. 8 Country Sunk External Tooth - Carbon Steel Zinc Plated
	03-1419-09	Screw, No. 8 x 1-1/4 S/T Flat Hd
	03-1423-06	Nut, Speed - No. 8 J-Type
2	A28047-001	Panel, Rear (C.R.S. Painted)
	A28047-002	Panel, Rear (Sainless Steel)
		attaching parts, Index 2
	03-1404-09	Screw, No. 8 x 1-1/2 T/F Tap
	03-1417-03	Lockwasher, No. 8 External Tooth - Carbon Steel Zinc Plated
3	A26864-003	Panel, Left Side (C.R.S. Painted)
	A26864-002	Panel, Left Side (Stainless Steel)
		attaching parts
	03-1417-03	Lockwasher, No. 8 External Tooth - Carbon Steel Zinc Plated
	03-1404-09	Screw, No. 8 x 1-1/2 T/F Tap
	03-1507-00	Nut, Speed - No. 8
4	A26866-003	Panel, Right Side (C.R.S. Painted)
	A26866-002	Panel, Right Side (Stainless Steel)
		attaching parts
	03-1417-03	Lockwasher, No. 8 External Tooth - Carbon Steel Zinc Plated
	03-1404-09	Screw, No. 8 x 1-1/2 T/F Tap
	03-1507-00	Nut, Speed - No. 8
5	A26865-003	Panel, Front (C.R.S. Painted)
	A26865-002	Panel, Front (Stainless Steel)
		attaching parts
	03-1417-15	Lockwasher, No. 8 Country Sunk External Tooth - Carbon Steel Zinc Plated
	03-1419-09	Screw, No. 8 x 1-1/4 S/T Flat Hd
	03-1423-06	Nut. Speed - No. 8 J-Type

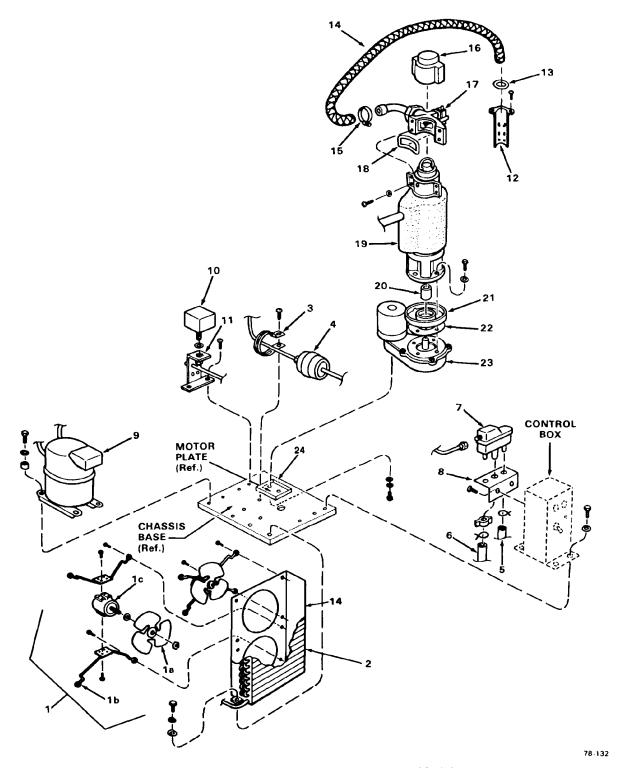


Figure 8-2. Major Assemblies — Air-Cooled Models.

ITEM NUMBER	PART NUMBER	DESCRIPTION
	No Number	Major Assemblies - Air Cooled Models
1	No Number	Bracket Assembly, Fan Motor and Mounting
1a	18-0231-01	Blade, Fan
	No Number	Pad, Vibration (p/o Fan Motor)
41	No Number	Nut, Fan Mounting (p/o Fan Blade)
1b	02-2378-01	Bracket, Fan Mounting
1c	12-1575-02	Motor, Fan attaching parts, Index 1c to 1b
	No Number	Screw (p/o Fan Motor)
	NO Number	attaching parts, Index 1 to Condenser Shroud
	03-1404-11	Screw, No. 1/4-20 x 1/2 T/C Hex Hd
2	18-3714-01	Condenser - Air-Cooled
		attaching parts, Index 2
	03-1417-09	Lockwasher, No. 1/4 External Tooth - Carbon Steel Zinc Plated
	03-0571-00	Screw, No. 1/4-20 x 1/2 T/C Hex Hd
3	A09388-001	Brace, Drier
4	02-0544-01	Drier
	00 1000 01	attaching parts, Index 3 and 4
5	03-1360-01 13-0079-03	Screw, No. 10-16 x 3/4 S/T Tube (Reservoir Overflow to Drip Pan)
6	13-0674-09	Tube (Reservoir to Freezer Inlet)
· ·	10-0014-05	attaching parts, Index 5 and 6
	02-0535-00	Clamp (Index 5)
	02-0694-00	Clamp (Index 6)
7	02-2217-01	Reservoir
	02-2217-02	Valve Assembly, Float (Not Shown)
		attaching parts, Index 7
_	No Number	Wing Nut (p/o Reservoir)
8	A20959-000	Bracket, Mounting
	03-1572-01	attaching parts, Index 8 Screw, No. 8-18 x 1/2 Phil Pan Hd
9	No Number	Compressor (See Figure 8-4)
J	140 Hamber	attaching parts, Index 9
	18-2300-27	Grommet
	18-2300-26	Sleeve, Mounting
	03-1417-12	Lockwasher, No. 1/16 External Tooth - Carbon Steel Zinc Plated
	03-1408-29	Washer, Special
	03-1405-40	Screw, No. 5/16-18 x 1-3/4 Hex Cap
10	11-0296-00	Control, Pressure — H ² O
11	A27993-001	Bracket, Utility
	13-0617-26	O-Ring
	03-1394-00	attaching parts, Index 10 and 11 Nut. Pal
	03-1360-01	Screw, No. 10-16 x 3/4 S/T
12	A30487-001	Bracket, Bin Thermo
	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	attaching part, Index 12
	No Number	Screw, No. 8 Sheet Metal
13	13-0806-01	Pad, Sealing
14	A26161-001	Condensor Shroud

ITEM NUMBER	PART NUMBER	DESCRIPTION
14	A26537-002	Tube, Ice attaching parts, Index 14 and 15
15	02-0179-02	Clamp, Hose
16	13-0809-01	Cap, Freezer
17	No Number	Spout Assembly (See Figure 8-5)
18	02-1437-00	Gasket, Spout
		attaching parts, Index 17 and 18
	03-1417-07	Lockwasher, No. 1/4 Internal Tooth - Phosphor Bronze
	03-1544-03	Screw, No. 1/4-20 x 1 Soc-Hd Cap (SS)
19	No Number	Freezer Assembly
		(See Figure 8-6)
		attaching parts, Index 19
	03-1408-35	Washer, Special
	03-1410-04	Lockwasher, No. 5/16 Helical Spring - Carbon Steel Zinc Plated
	03-1420-01	Screw, No. 5/15-18 x 7/8 Hex Cap
20	15-0573-01	Coupling
21	A21290-000	Pan, Drip
22	13-0704-00	Gasket
23	A32402-022	Drivemotor Assembly (230 V) See page 13
		attaching parts, Index 23
	03-1417-09	Lockwasher, No. 1/4 External Tooth - Carbon Steel Zinc Plated
	03-0571-00	Screw, No. 1/4-20 x 1/2 T/C Hex Cap
24	A28207-001	Motor Plate Not Shown
25	A32585-001	Motor Shield Not Shown
26	A32423-001	Motor Strap Not Shown
20 27	16-0563-00	·
		Valve Cap Not Shown
28	16-0560-00	Valve Core Not Shown

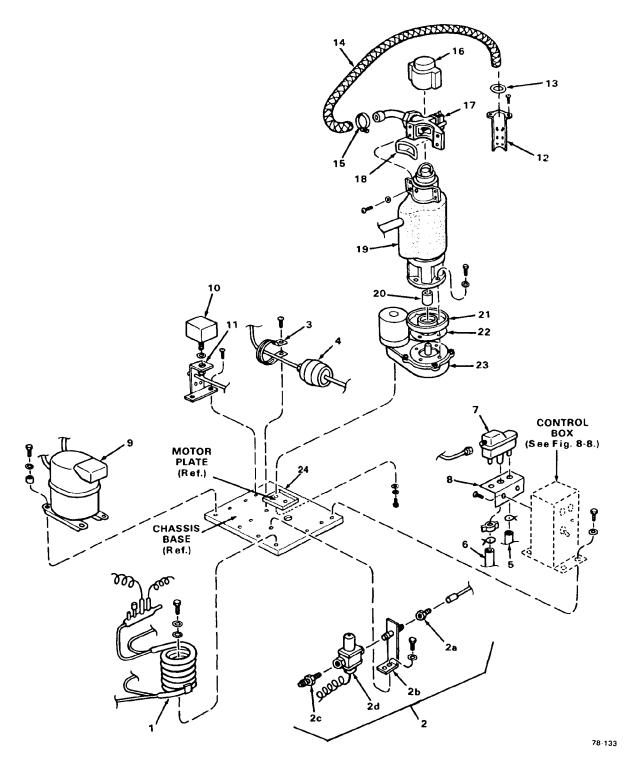


Figure 8-3. Major Assemblies - Water-Cooled.

ITEM NUMBER	PART NUMBER	DESCRIPTION
	No Number	Major Assemblies - Water-Cooled Model
1	18-3306-02	Condenser - Water-Cooled
		attaching parts, Index 1
	03-1417-09	Lockwasher, No. 1/4 External Tooth - Carbon Steel Zinc Plated
	03-0571-00	Screw, No. 1/4-20 x 1/2 T/C Hex Hd
2	No Number	Regulator Assembly, Water
	00 4447 00	attaching parts, Index 2
	03-1417-09	Lockwasher, No. 1/4 External Tooth - Carbon Steel Zinc Plated
0-	03-0571-00	Screw, No. 1/4-20 x 1/2 T/C Hex Hd
2a	16-0677-01	Union, Half - No. 5/8-18 x 3/8 Flare
2b	A15924-000	Nipple Assembly, Pipe (w/Bracket)
2c	16-0355-00	Coupling - 3/8 NPT x 3/8 Flare Brass
2d	11-0198-02	Valve, Water Regulator
3 4	A09388-000	Brace, Drier Drier
4	02-0544-01	attaching parts, Index 3 and 4
	03-1360-01	Screw, No. 10-16 x 3/4 S/T
5	13-0079-03	Tube (Reservoir Overflow to Drip Pan)
6	13-0674-09	Tube (Reservoir to Freezer Inlet)
J	10-0014-00	attaching parts, Index 5 and 6
	02-0535-00	Clamp (Index 5)
	02-0694-00	Clamp (Index 6)
7	02-2217-01	Reservoir
•	02-2217-02	Valve Assembly, Float (Not shown)
	02 -2 0 ₂	attaching parts, Index 7
	No Number	Wing Nut (p/o Reservoir)
8	A20959-000	Bracket, Mounting
		attaching parts, Index 8
	03-1572-01	Screw, No. 8-18 x 1/2 S/T Phil Pan Hd
9	No Number	Compressor
		attaching parts, Index 9
	18-2300-27	Grommet
	18-2300-26	Sleeve, Mounting
	03-1417-12	Lockwasher, No. 5/16 External Tooth - Carbon Steel Zinc Plated
	03-1408-29	Washer, Special
10	03-1405-40	Screw, No. 5/16-18 x 1-3/4 Hex Cap
10	11-0296-00	Control, Pressure - H ² O
11	A27993-001 13-0617-26	Bracket, Utility O-Ring
	12-1213-06	Bushing, Snap
	12-1213-00	attaching parts, Index 10 and 11
	03-1394-00	Nut, Pal
	03-1360-01	Screw, No. 10-16 x 3/4 S/T
12	A30487-001	Bracket, Bin Thermo
	. 100 .07 001	attaching part, Index 12
	No Number	Screw, No. 8 Sheet Metal

ITEM NUMBER	PART NUMBER	DESCRIPTION
13 14	13-0806-01 A26537-002	Pad, Sealing Tube, Ice attaching parts, Index 14 and 15
15	02-0179-02	Clamp, Hose
16	13-0809-01	Cap, Freezer
17	No Number	Spout Assembly (See Figure 8-5) attaching parts, Index 17 and 18
18	02-1437-00	Gasket, Spout
	03-1417-07	Lockwasher, No. 1/4 Internal Tooth - Phosphor Bronze
	03-1544-03	Screw, No. 1/4-20 x 1 Soc-Hd Cap
19	No Number	Freezer Assembly (See Figure 8-6) attaching parts, Index 19
	03-1408-35	Washer, Special
	03-1410-04	Lockwasher, No. 5/16 Helical Spring - Carbon Steel Zinc Plated
	03-1420-01	Screw, No. 5/16-18 x 7/8 Hex Cap
20	15-0573-01	Coupling
21	A21290-000	Pan, Drip
22	13-0704-00	Gasket
23	A32402-022	Drivemotor Assembly (230 V) See Page 13 attaching parts, Index_23
	03-1417-09	Lockwasher, No. 1/4 External Tooth - Carbon Steel Zinc Plated
	03-0571-00	Screw, No. 1/4 20 x 1/2 T/C Hex Cap
24	A28207-001	Motor Plate
25	A32585-001	Motor Shield Not Shown
26	A32423-001	Motor Strap Not Shown
27	16-0563-00	Valve Cap Not Shown
28	16-0560-00	Valve Core Not Shown

NOTE: See Page 14 for replacement parts within the Control Box Assembly.


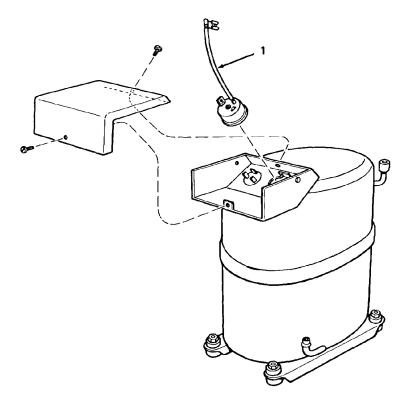


Figure 8-4. Compressor Assembly

ITEM NUMBER	PART NUMBER	DESCRIPTION
1	18-3800-02 18-3800-03 18-3800-07 18-2300-25	Compressor Assembly — 230/60/1 Compressor Assembly — 208-220/60/3 Compressor Assembly — 208/60/1 (See Figure 8-2/9 and 8-3/9 for next higher Assembly Overload — (230/60/1)
	18-2300-32	Overload — (208/60/1)


NOTE: 208-220/60/3 internally protected. No service replacement part.

78-128

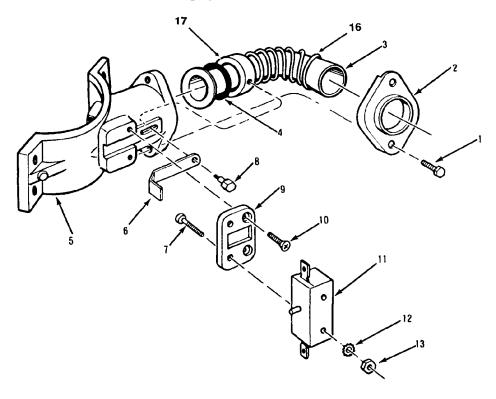

SPOUT ASSEMBLY — STAINLESS STEEL

ITEM NUMBER	PART NUMBER	DESCRIPTION
1	03-1405-02	Screw 1/4-20 x 3/8 Hex Head Cap
2	A29041-001	Retainer Plate
3	02-2490-01	Tube, Ice Discharge
4	13-0617-43	"O" Ring
5	A29050-001	Spout
6	A29429-002	Actuator, Switch
7	03-1418-38	Screw No. 6-32 x 1 Flat Head
		Machine Phil Recess
8	A25305-001	Screw, Shoulder
9	02-2377-01	Barrier, Thermal
10	03-1418-01	Screw No. 6-32 x 3/8 Flat Head Machine - Phil Recess
11	12-1664-01	Switch
12	03-1417-01	Lockwasher No. 6 External Tooth Phosphor Bronze
13	03-1406-01	Nut No. 6-32 Hex Machine Screw
14	A29430-020	Complete Assembly
15	02-1437-00	Spout Gasket (Not Shown)
16	02-2145-04	Spring
17	A29089-001	Collar

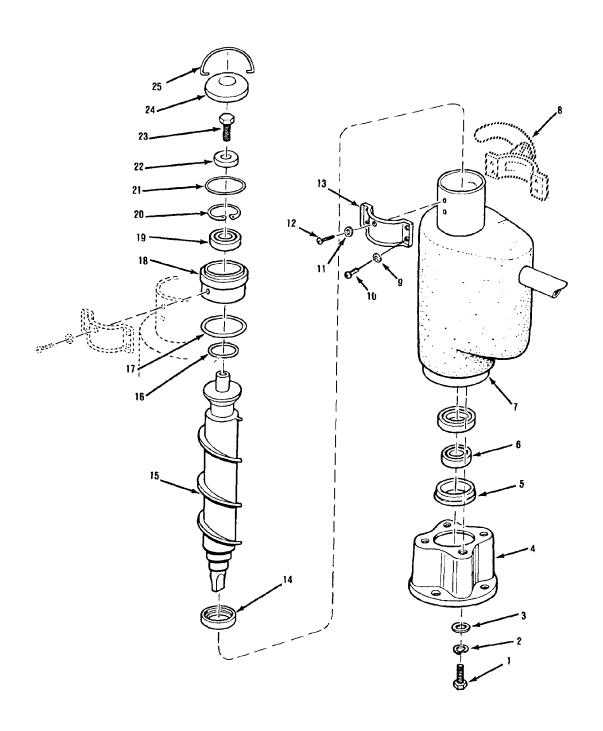


Evaporator Assembly
OCTOBER 1986

Page 11

FREEZER ASSEMBLY

ITEM NUMBER	PART NUMBER	DESCRIPTION
1	03-1405-41	Screw
2	03-1408-03	Washer
3	03-1410-04	Washer
4	02-1629-00	Adapter
5	A10591-000	Bearing Retainer
6	02-0619-00	Bearing
7	A34572-020	Freezer
8	A29430-020	Spout
9	03-1409-20	Washer
10	03-1506-03	Screw
11	03-1409-20	Washer
12	03-1506-03	Screw
13	A24928-001	Spout Plate
14	02-0929-01	Water Seal
15	A29467-001	Auger
16	13-0617-15	"O" Ring
17	13-0617-40	"O" Ring
18	A26708-001	Bearing Retainer and Bearing
19	02-0646-00	Bearing
20	03-1558-04	Retainer Ring
21	13-0617-20	"O" Ring
22	A06273-000	Washer
23	03-1405-36	Screw
24	A08581-000	Freezer Cap
25	A08582-000	Breaker Hook

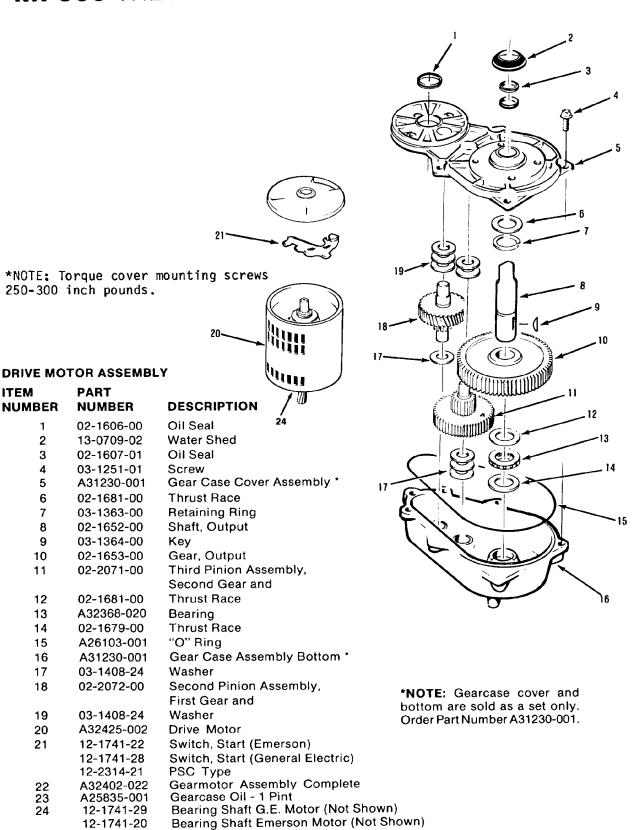


PART

ITEM

NUMBER

23


Drive Motor Assembly

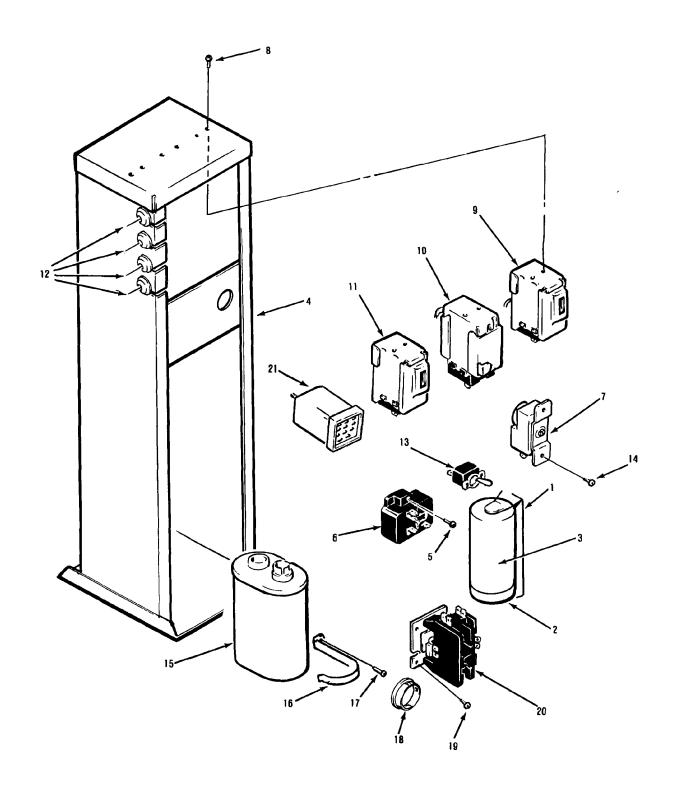


Control Box Assembly

CONTROL BOX


ITEM NUMBER	PART NUMBER	DESCRIPTION
1	18-2200-39	Start Capacitor Bracket
2	18-3724-01	Capacitor Cap
3	18-1901-15	Start Capacitor — 230-208/60/1
4	No Number	Control Box
5	03-1403-04	Screw
6	18-1903-29	Relay — 230/60/1
	18-1903-34	Relay — 208/60/1
7	11-0354-00	Bin Thermostat
8	03-1403-02	Screw
9	11-0402-01	Auger Delay Control
10	11-0403-01	Fan Pressure Control (A-C)
	11-0388-02	Hi Pressure Control (W-C)
11	11-0420-01	Low Pressure Control
12	13-0557-00	Grommet
13	12-0426-01	Master Switch
14	03-1403-17	Screw
15	18-1902-29	Run Capacitor — 230/60/1
	18-1902-34	Run Capacitor — 208/60/1
16	No Number	Capacitor Bracket
17	03-1403-23	Screw
18	12-1213-12	Snap Bushing
19	03-1403-17	Screw
20	12-2048-02	Contactor 230-208/60/1
	12-0739-02	Contactor 208-230/60/3
21	12-2090-05	Relay, Contactor Isolation, 208-230
22	A28063-001	Cover - Control Box Not Shown

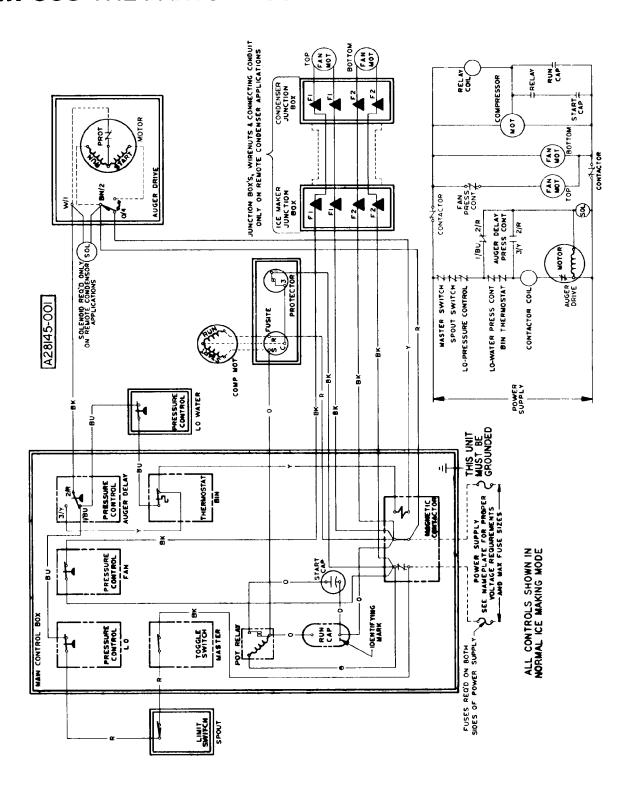


Wiring Diagram Air-Cooled Model — MF-900A-2A & MF-900A-7A.

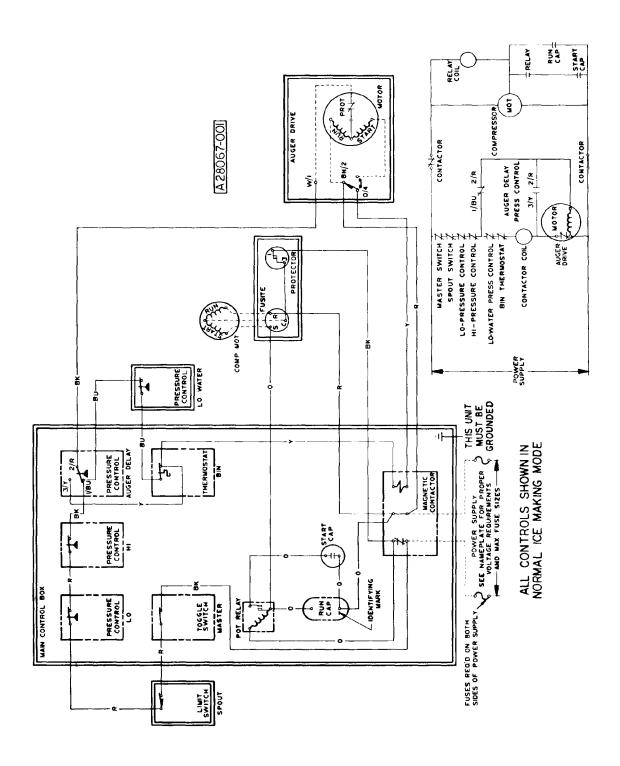

Wiring Diagram Water-Cooled Model - MF-900W-2A & MF-900W-7A.

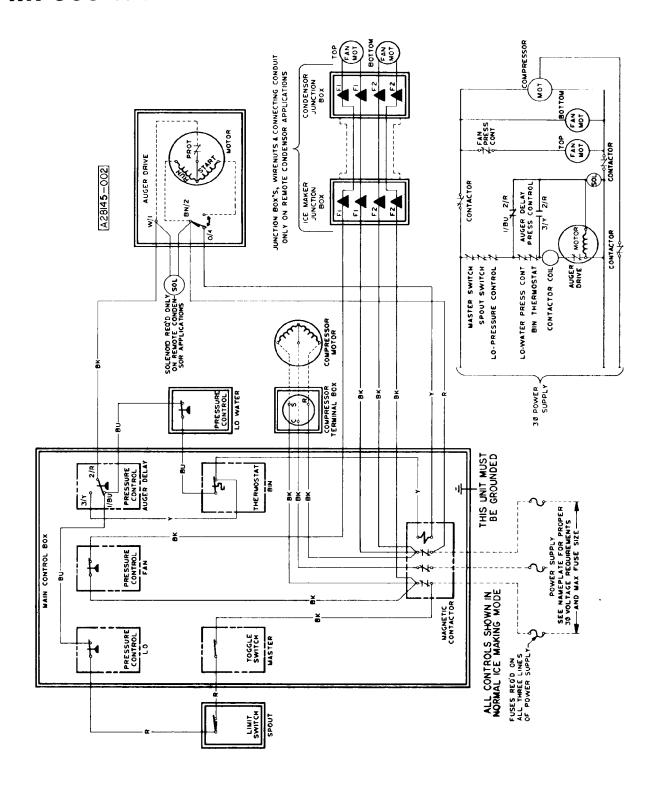

Wiring Diagram Air-Cooled Model - MF-900A-3A.

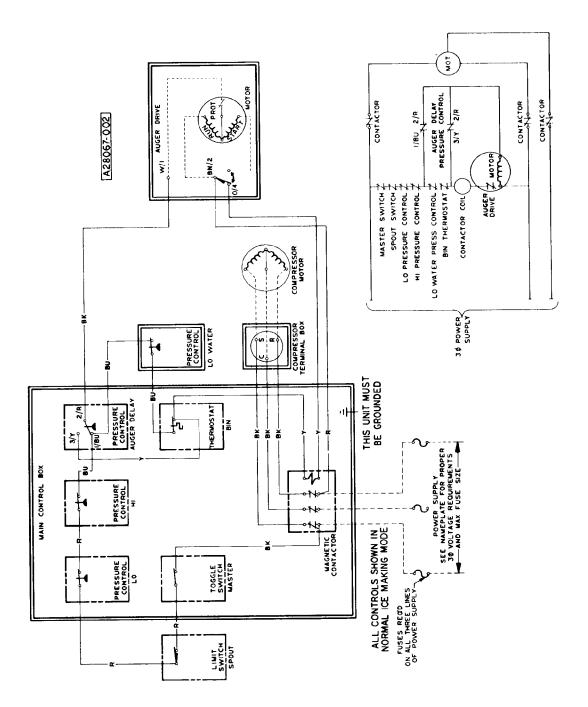

Wiring Diagram Water-Cooled Model - MF-900W-3A.

