


CU0415X, CU0715X and CU0920X Service Parts

This is the illustrated parts list for the CU0415X,
CU0715X and CU0920X.

Contents


Cabinet - CU0415X or CU0715X.....	2
Cabinet - CU0920X	3
Under Bin Parts	4
Bin and Insulation	5
Refrigeration System - CU0415X and CU0715X.....	6
Refrigeration System - CU0920X	7
Water System	8
Controls and Electrical.....	9
Wiring Diagram.....	10
Schematic Diagram	11

Cabinet - CU0415X or CU0715X

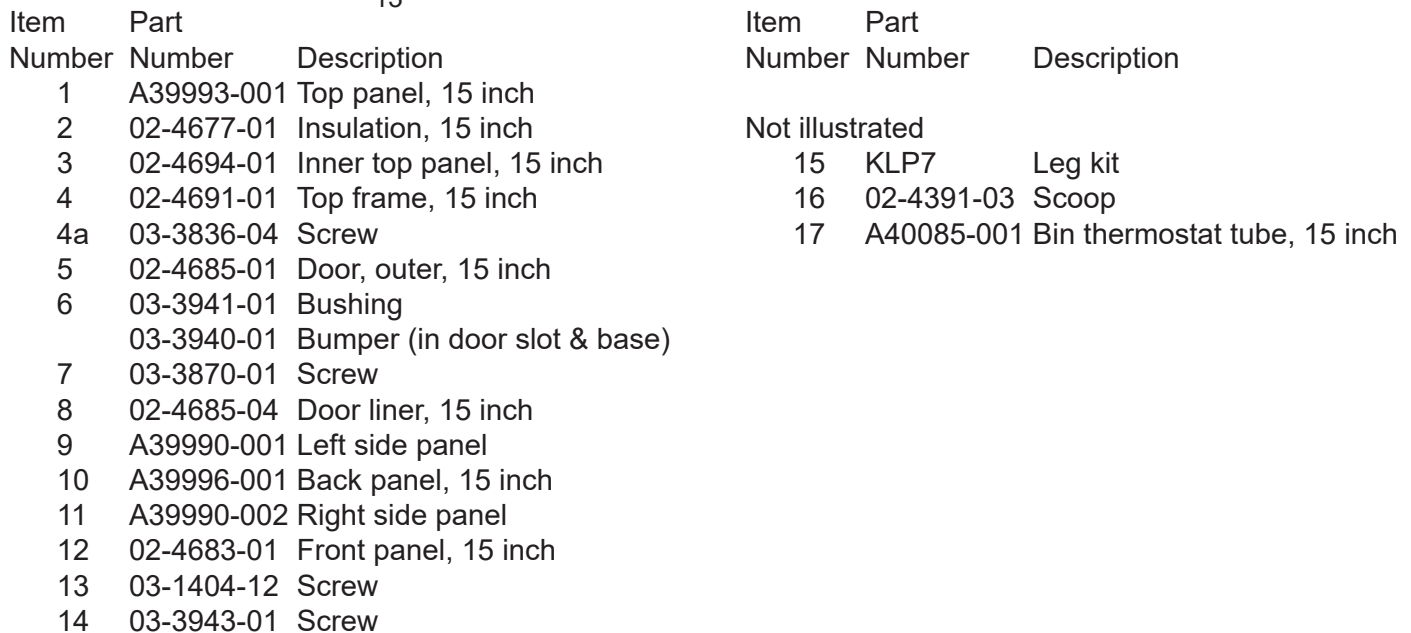

CU0415X, CU0715X and CU0920X Service Parts

Cabinet - CU0920X

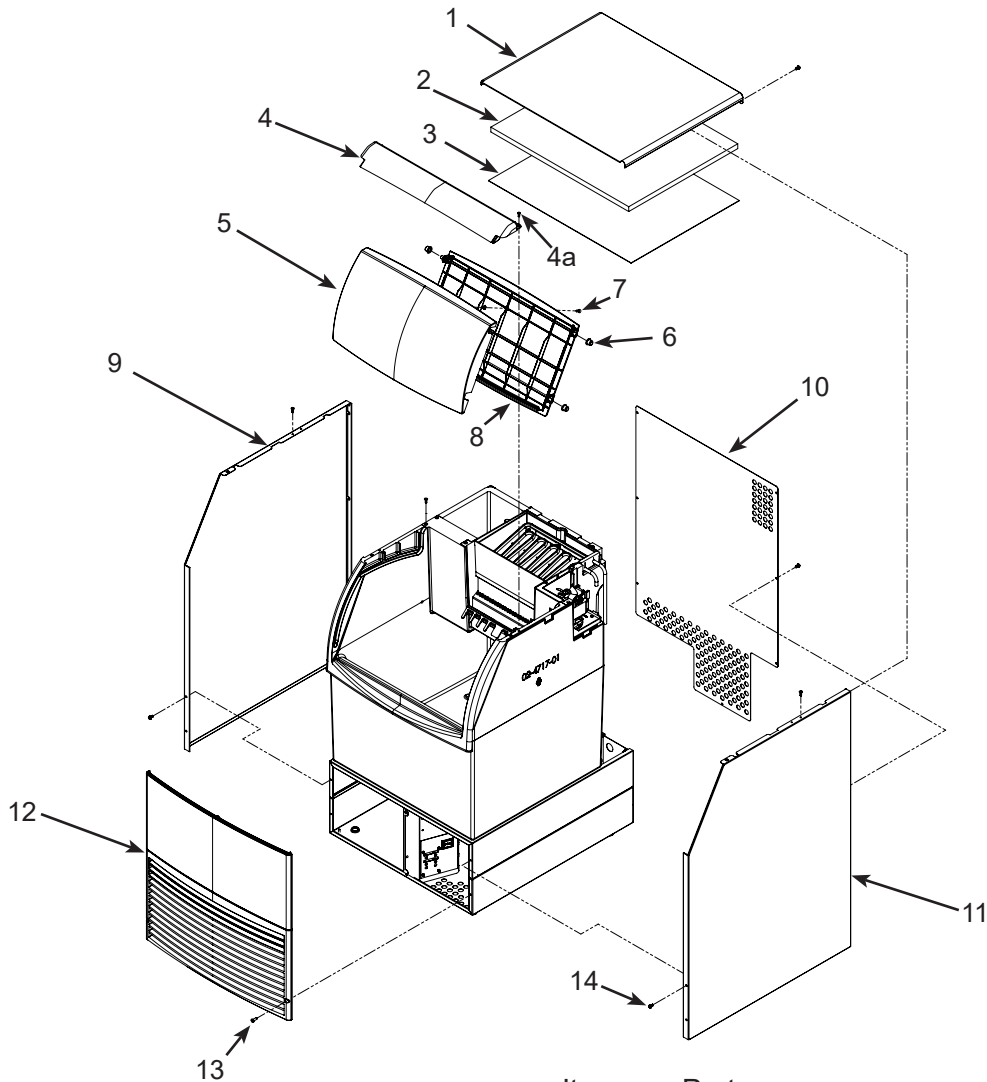


Item Number	Part Number	Description
1	A39993-002	Top panel, 20 inch
2	02-4677-02	Insulation, 20 inch
3	02-4695-01	Inner top panel, 20 inch
4	02-4692-01	Top frame, 20 inch
4a	03-3836-04	Screw
5	02-4686-01	Door, outer, 20 inch
6	03-3941-01	Bushing
	03-3940-01	Bumper (in door slot & base)
7	03-3870-01	Screw
8	02-4686-04	Door liner, 20 inch
	02-4805-01	Rod, door support
9	A39990-001	Left side panel
10	A39997-001	Back panel, 20 inch
11	A39990-002	Right side panel
12	02-4684-01	Front panel, 20 inch
13	03-1404-12	Screw
14	03-3943-01	Screw

Item Number	Part Number	Description
Not illustrated		
15	KLP7	Leg kit
16	02-4391-03	Scoop
17	A40085-002	Bin thermostat tube, 20 inch

CU0415X, CU0715X and CU0920X Service Parts

Under Bin Parts

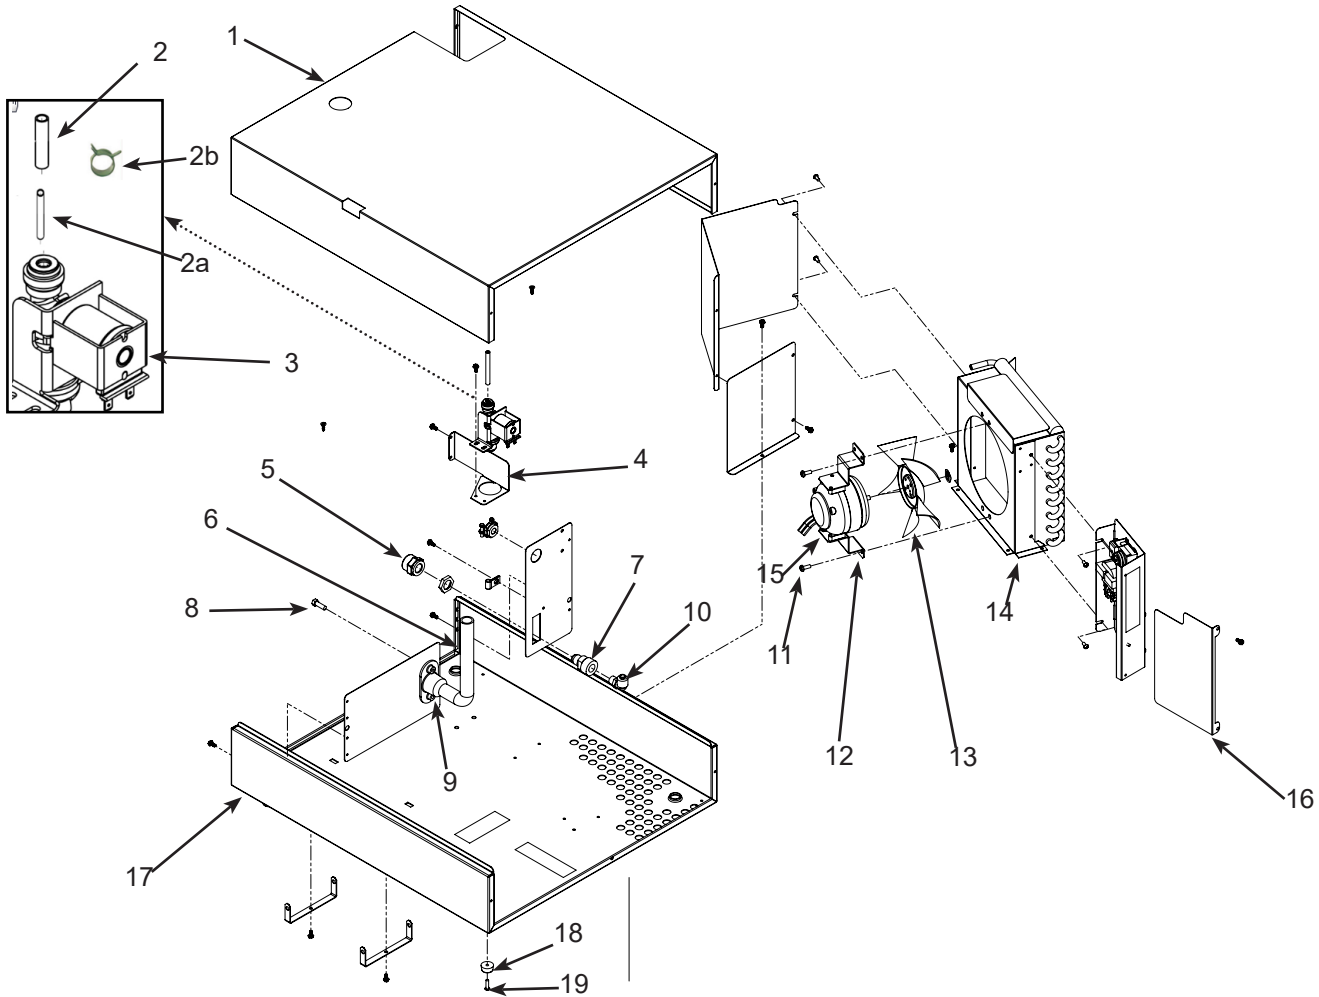

Item Number	Part Number	Description
1	A39991-001	Chassis cover, 15 inch
	A39991-002	Chassis cover, 20 inch
2	13-0674-01	1/4 ID Hose, requires < 24"
2a	13-0895-01	1/4 OD Hose, requires < 12"
2b	03-3961-01	Hose Clamp
3	12-3055-01	Inlet water sol valve, 115 volt
	12-3055-02	Inlet water sol valve, 230 volt
4	A40014-001	Bracket
5	16-1150-01	Adapter for 230 volt models
6	A39992-002	Drain hose
7	16-0835-01	Hose fitting, 230 volt models
8	03-0571-00	Screw for drain fitting
9	02-3692-23	Drain fitting kit
10	16-1081-01	Elbow, 230 volt models
11	03-3943-02	Screw
12	A39556-001	Fan motor bracket


Item Number	Part Number	Description
13	02-4197-01	Fan blade
14	A39460-001	Fan shroud
15	Fan motor see table	

Part number	Model Size	Voltage
12-3024-01	40	115
12-3024-01	70	115
12-2989-01	90	115

16	A40077-001	Cover
17	Not available Base, 15 inch Not available Base, 20 inch	
18	03-3940-01	Bumper
19	03-1531-08	Screw

CU0415X, CU0715X and CU0920X Service Parts


Bin and Insulation

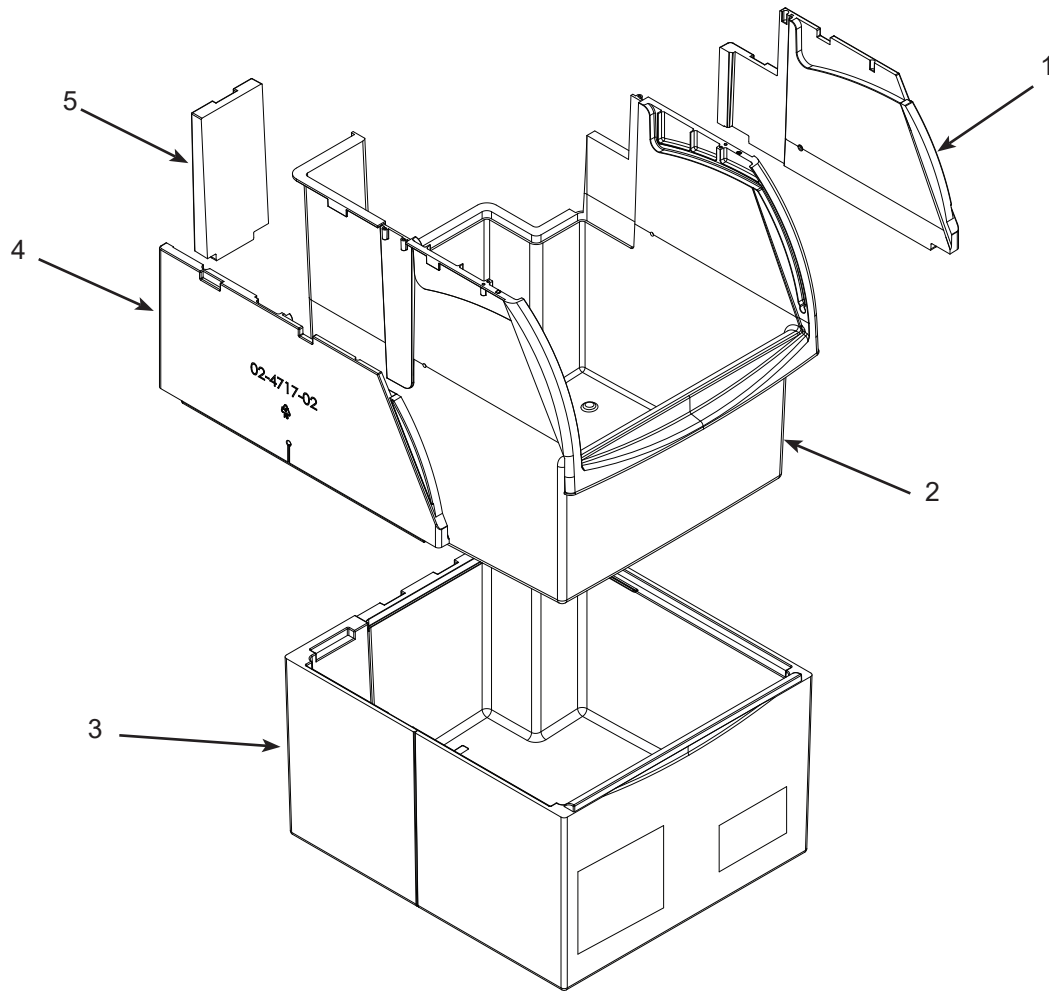

Item Number	Part Number	Description
1	02-4717-01	Right side insulation
2	02-4705-01	Bin liner, 15 inch
	02-4706-01	Bin liner, 20 inch
3	02-4696-01	Insulation, 15 inch bin
	02-4697-01	Insulation, 20 inch bin
4	02-4717-02	Left side insulation
5	02-4718-01	Insulation filler

CU0415X, CU0715X and CU0920X Service Parts

Refrigeration System - CU0415X and CU0715X

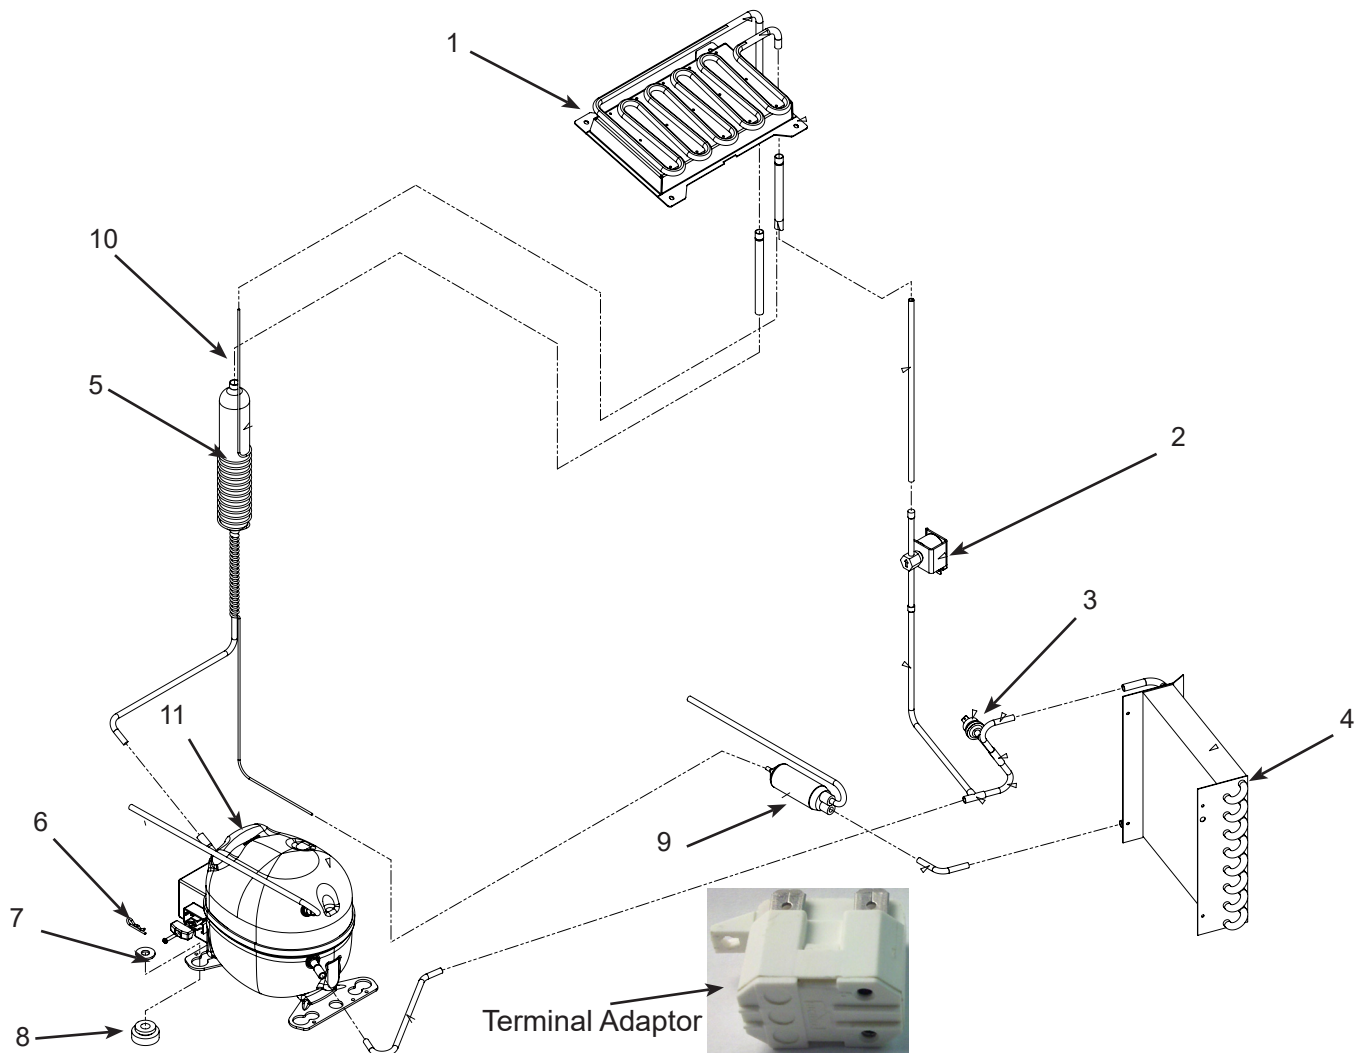

Item Number	Part Number	Description
1	A40204-021	Evaporator
2	11-0562-01	Hot gas valve, 115 volt
	11-0562-02	Hot gas valve, 230 volt
3	11-0566-24	Fan motor pressure switch
4	18-9015-21	Condenser

Item Number	Part Number	Description
5	A40009-001	Suction assy, 40 lb, 230 volt
	A40010-001	Suction assy, 40 lb 115 volt
	A40010-001	Suction assy, 70 lb
6	03-3821-01	Clip
7	03-1407-08	Washer
8	18-8964-01	Grommet
9	02-4416-01	Dryer
10	03-1711-01	Thermistor clip


11 Compressors and starting components

Model	Voltage	Compressor	Relay	Terminal Adaptor	Start Capacitor	Overload
CU0415X-1	115/60/1	18-9000-21	18-9000-52	12-3008-01	18-1901-65	18-9000-51
CU0715X-1	115/60/1	18-9001-21	18-9001-52	12-3008-01	18-9001-64	18-9001-51

Compressors include starting components and a dryer.

CU0415X, CU0715X and CU0920X Service Parts

Refrigeration System - CU0920X

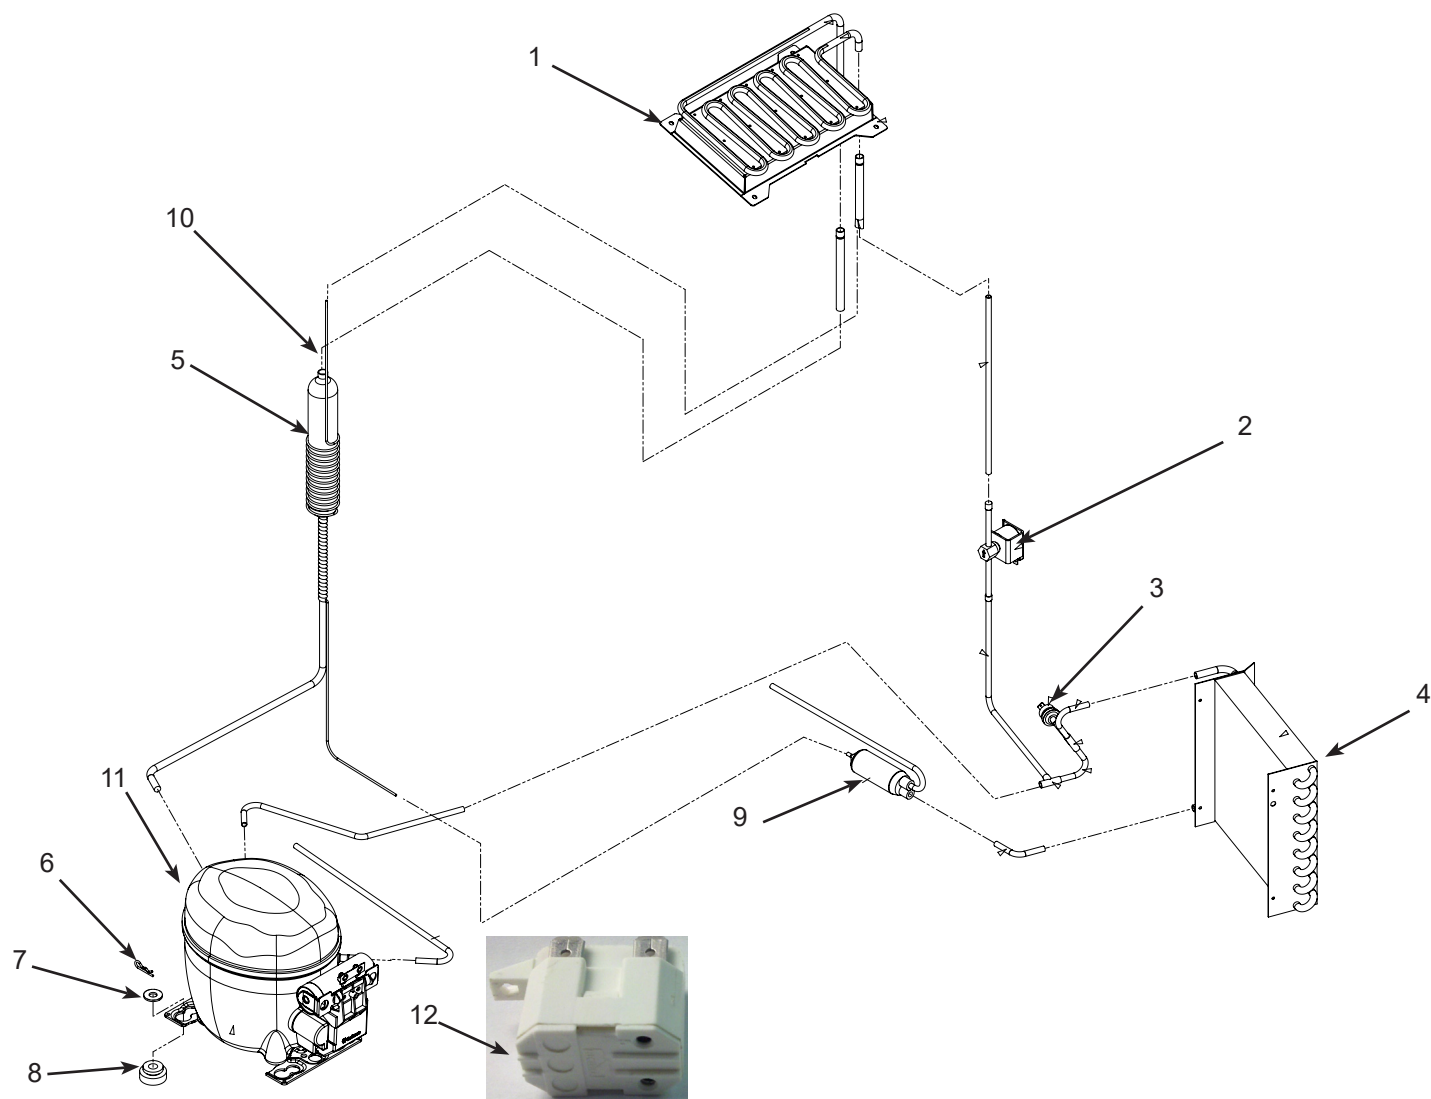

Item Number	Part Number	Description
1	A40204-021	Evaporator
2	11-0562-01	Hot gas valve, 115 volt
	11-0562-02	Hot gas valve, 230 volt
3	11-0566-24	Fan motor pressure switch
4	18-9015-21	Condenser

Item Number	Part Number	Description
5	A40011-001	Suction assy, 90 lb
6	03-3821-01	Clip
7	03-1407-08	Washer
8	18-8964-01	Grommet
9	02-4416-01	Dryer
10	03-1711-01	Thermistor clip
12	12-3008-01	Terminal Adaptor


11 Compressors and starting components

Model	Voltage	Compressor	Relay	Terminal Adaptor	Start Capacitor	Overload
CU0920X-1	115/60	18-9002-21	18-9002-51	12-3008-01	18-9002-52	18-9002-53

Compressors include starting components and a dryer.

CU0415X, CU0715X and CU0920X Service Parts

Water System

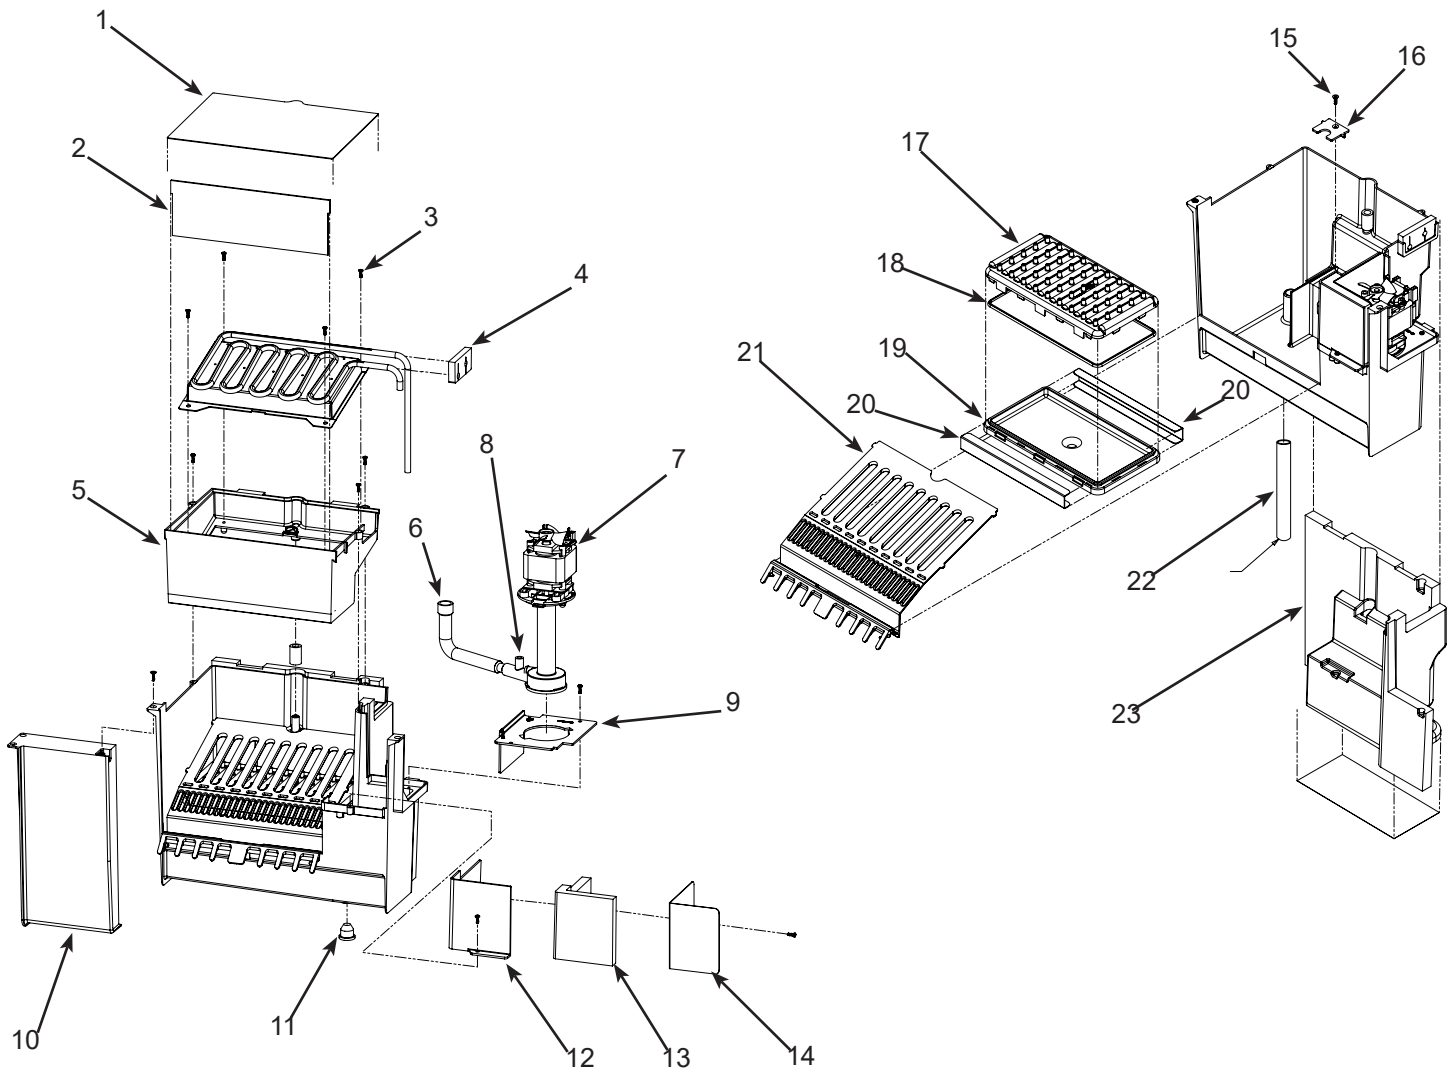


Item Number	Part Number	Description
1	02-4688-01	Evaporator cover
2	02-4707-01	Curtain
3	03-3836-04	Screw
4	02-4704-01	Grommet
5	02-4679-01	Evap frame
6	02-4678-01	Pump hose, 60 Hz models
	02-4739-01	Pump hose, 50 Hz models
7	12-2986-21	Water pump, 115 volt models
	12-2986-22	Water pump, 230 volt models
8	11-0606-01	Thermistor, long/blue wire to pump hose
9	02-4703-01	Pump bracket
10	02-4699-01	Support

Item Number	Part Number	Description
11	13-0840-01	Drain plug
12	02-4702-01	Pump cover
13	02-4690-01	Insulation
14	A40003-001	Motor barrier
15	03-3870-01	Screw
16	02-4904-01	Clip
17	02-4680-01	Water header top
18	02-4693-01	Gasket
19	02-4681-01	Water header pan
20	A40012-001	Water header clip
21	02-4689-01	Cube deflector
22	13-0674-07	Hose, 11.25" req.
23	02-4687-01	Insulation

CU0415X, CU0715X and CU0920X Service Parts

Controls and Electrical

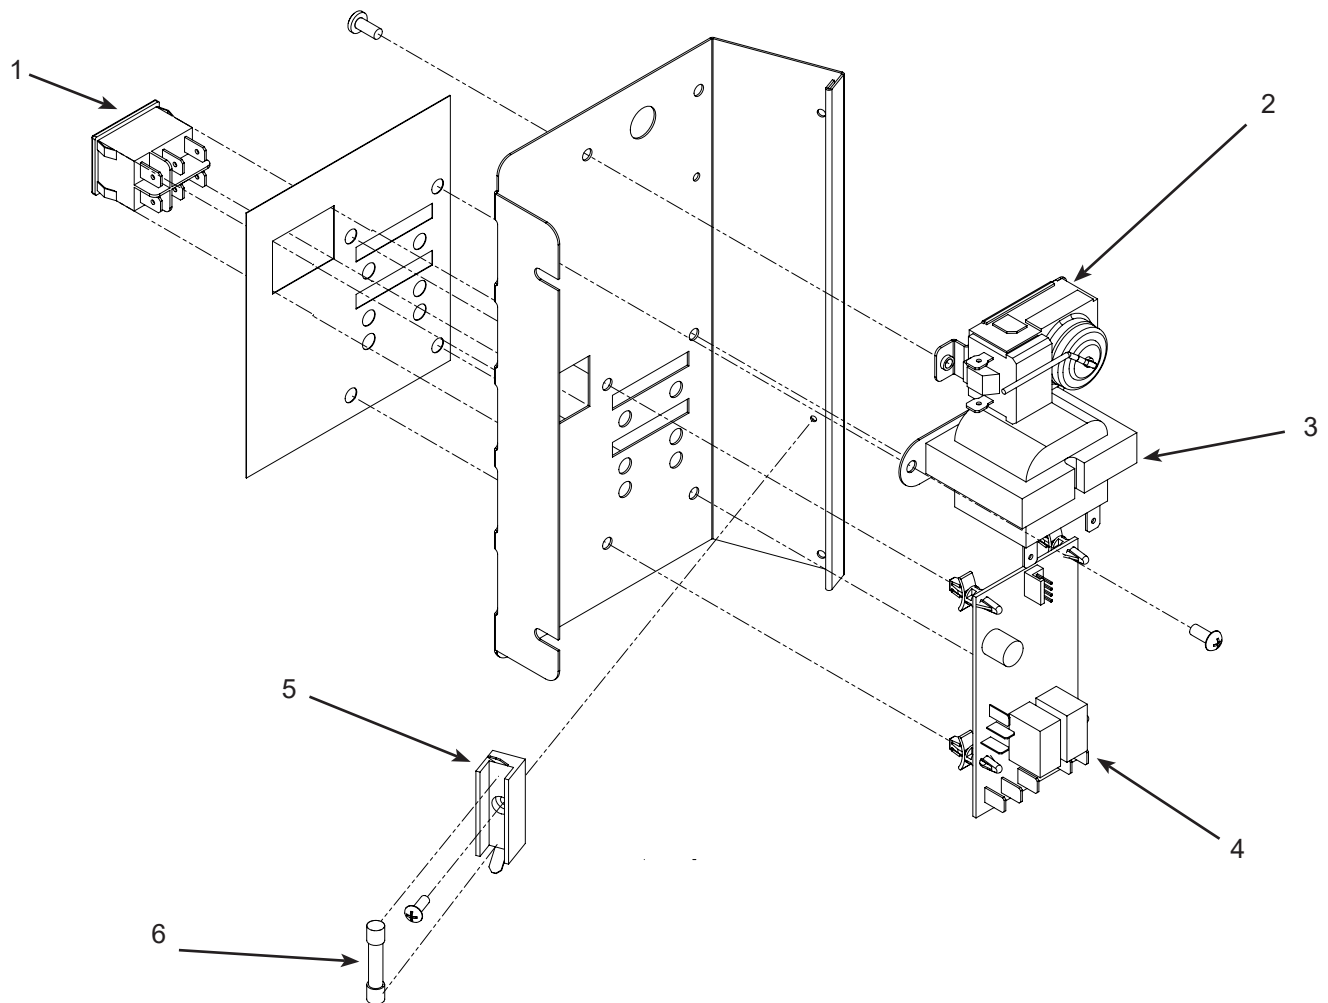


Item Number	Part Number	Description
1	12-3062-01	Master switch
2	11-0670-21	Bin thermostat
3	12-2924-01	Transformer 115 to 12
	12-2924-03	Transformer 230 to 12
4	11-0666-21	Controller
5	12-2687-01	Fuse block, 50 Hz only
6	12-2686-01	Fuse, 50 Hz only
Not shown		
7	12-3056-01	Wire harness, fits all
8	12-1638-14	Power cord, 115 volt models
	12-1638-22	Power cord, 230 volt, 50 Hz
	12-1638-23	Power cord, 230 volt, 60 Hz

CU0415X, CU0715X and CU0920X Service Parts

Wiring Diagram

17-3439-01

REV. A

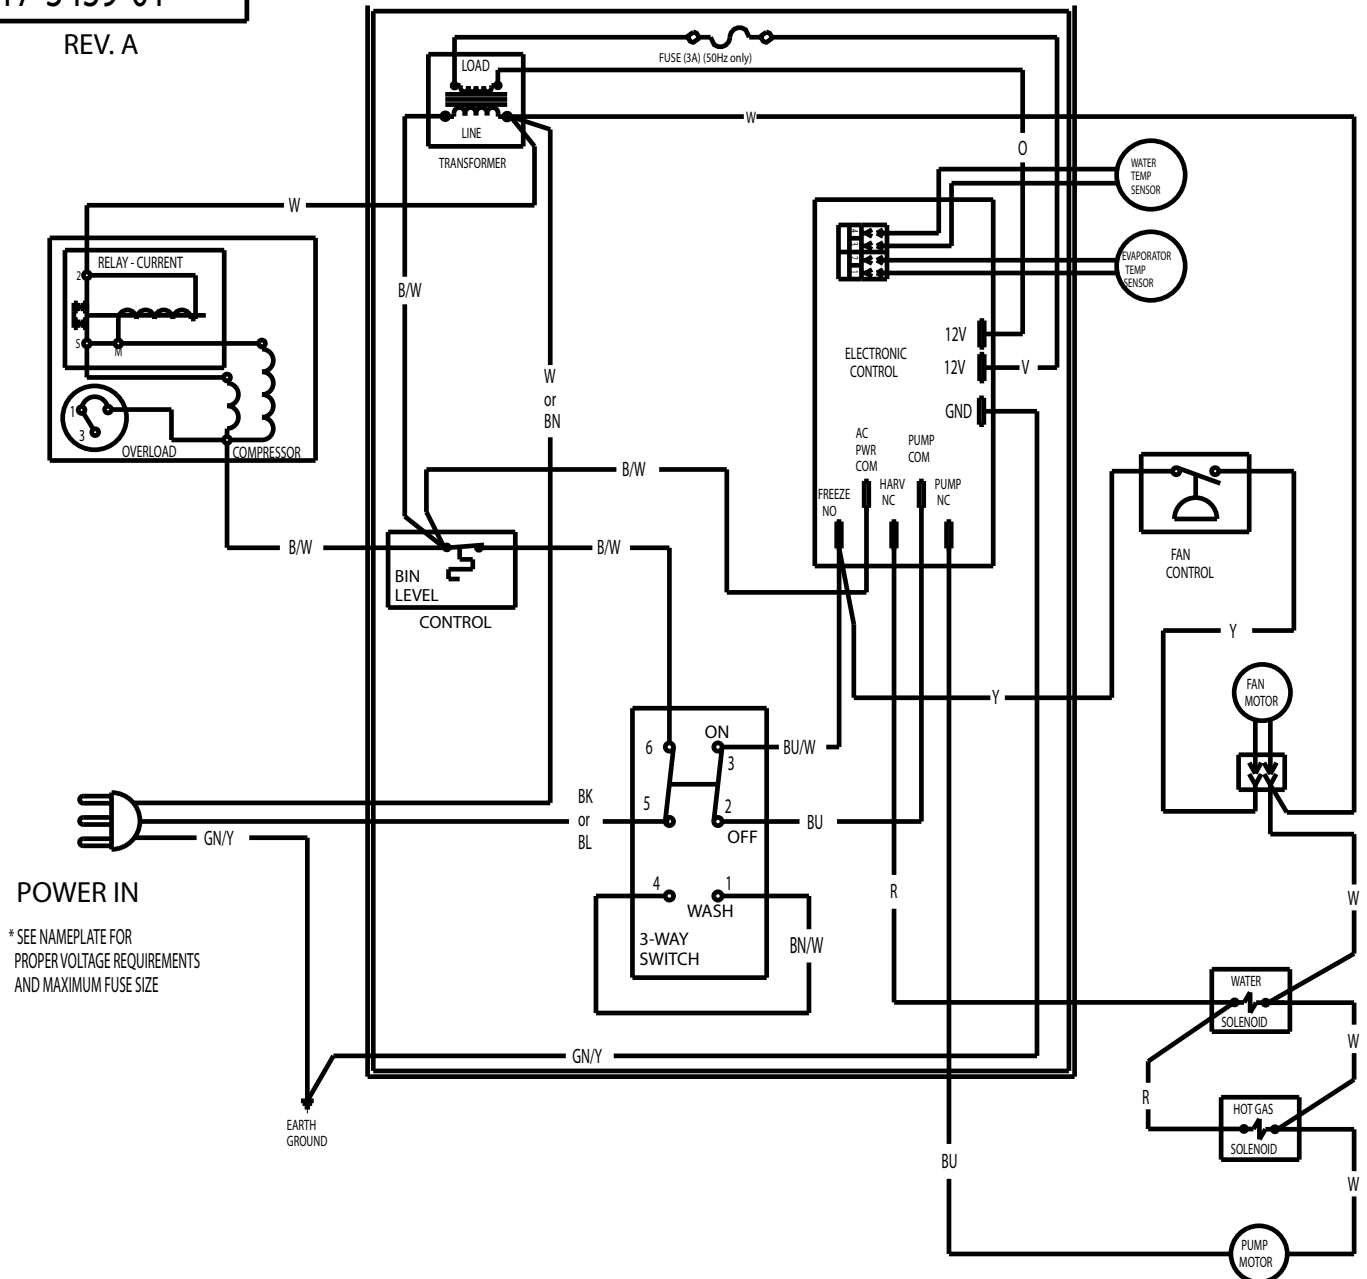

POWER IN

* SEE NAMEPLATE FOR PROPER VOLTAGE REQUIREMENTS AND MAXIMUM FUSE SIZE


EARTH GROUND

CAUTION:

MORE THAN ONE DISCONNECT MEANS MAY BE REQUIRED TO DISCONNECT ALL POWER TO UNIT

THIS UNIT MUST BE GROUNDED

Schematic Diagram

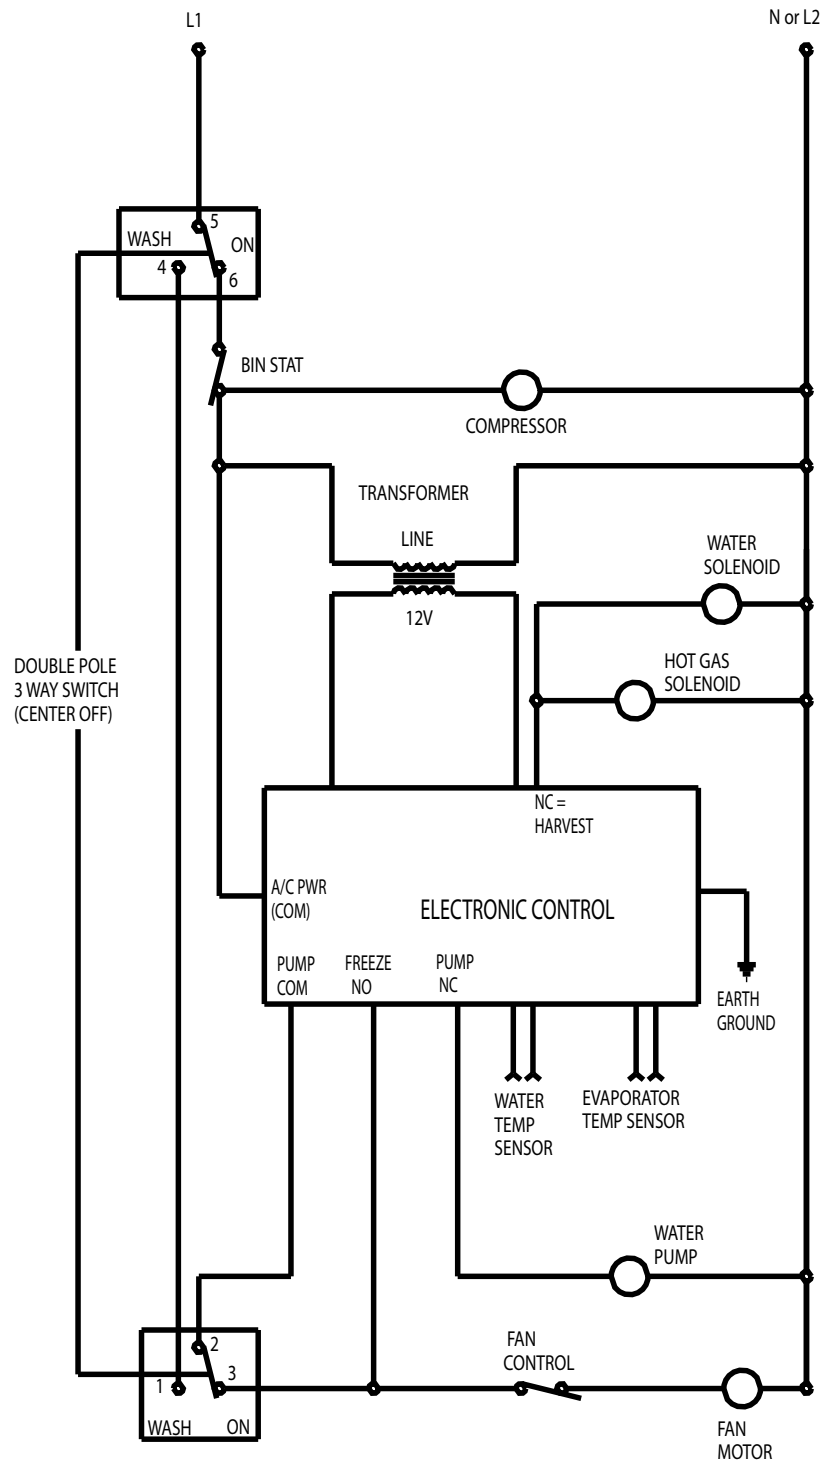

SWITCHES ON THIS UNIT
SHOWN IN FREEZE CYCLE