


Instructions

Bin Thermostat Add on for all Prodigy Nugget units with FS7000

Use Bin Thermostat: 11-0353-23

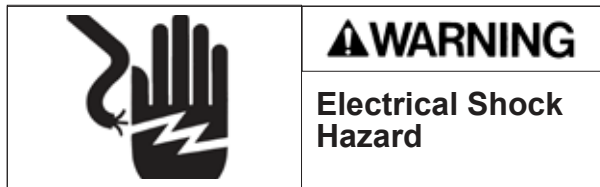

Ice Machine

1. Remove front panel.
2. Locate mounting hole in base of machine. The hole is located in the base of the machine and has a gray foam plug in it.
3. Remove the foam plug.
4. Uncoil the bin thermostat capillary tube.
5. Mount the thermostat in the control box support using the pre-punched holes. Figure A
6. Open the control box door. Locate the blue wires connected together with an insulated double male quick connect. Disconnect the blue wires at the quick connect. Figure B
7. Route bin thermostat capillary tube through the hold in the base and reinstall the foam plug.
8. Route thermostat cap tube on the **outside** of the deflector as (shown by the dashed line see Figure C)
9. Route Bin Stat Capillary tube **inside** the sheetmetal deflector between the two holes (shown by solid line) on Figure C)
10. Fold down a small section of the bin stat to hold in place, **outside** of the sheetmetal deflector. (Shown on Figure C)
11. Reconnect electrical power.
12. Return all panels and covers to their normal positions and secure with the original

Figure A



Figure B

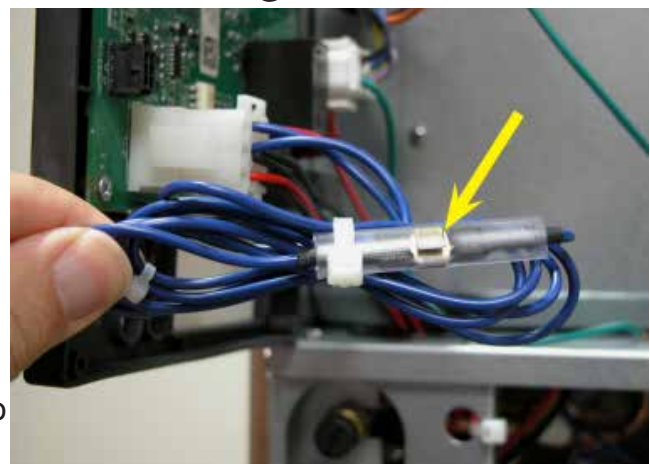


Figure C

